



	Detail	Item no.
1	Outer frame	UG6090-01
2	Inner frame	UG6090-03
3	Hinge	GJ4200
4	Hinge wall	GJ4202
5	Strike plate	BX0004
6	Bolt M10x20	BU1201/BU1200


	Detail	Item no.
7	Flange nut M10	MU1001/MU1010
8	Box lock	BX0001
9	Self-drilling screw 5,5x22	SS5221/SS5225
10	Box lock mount	BX0002
11	Gate stop	BX0005
12	Drop bolt lock	GK0042

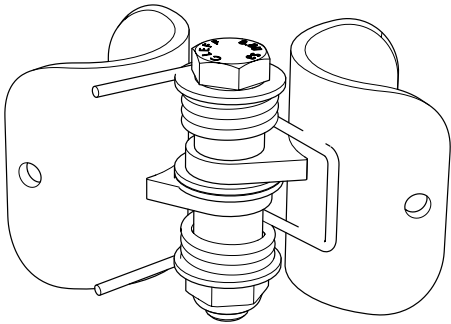


Hinge to railing

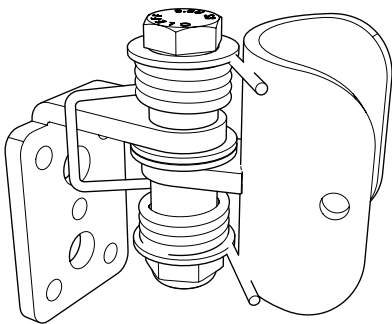


Hinge to wall

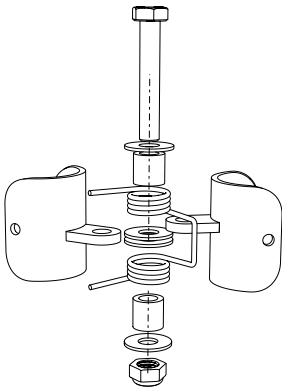


Hold-open
To reverse the opening direction, simply rotate the hinge 180°. Nut still facing down.

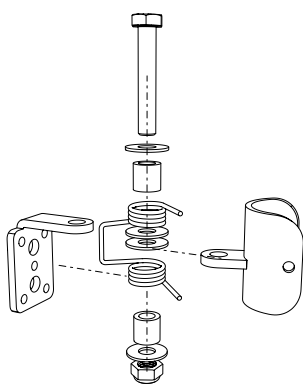


Hold-open wall
To reverse the opening direction, disassemble and flip the spring for right or left opening.

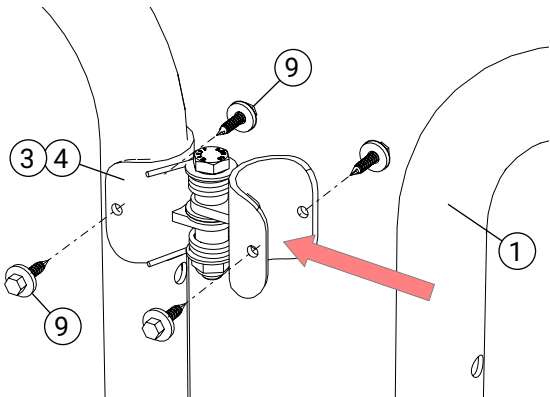


Hinge
Start by fitting the hinges (3 or 4) on the fixed frame or wall; rotate 180° for the right/left version. Use 4 self-drilling screws (9) per hinge.

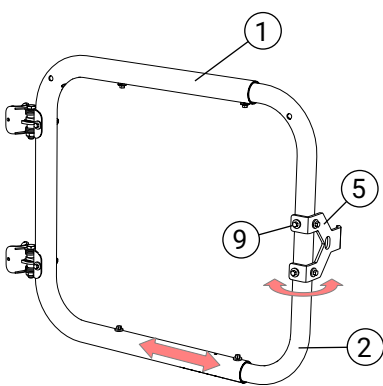


Installation in cross-section
Fit the strike plate (5) on the adjustable frame (2) with 4 self-drilling screws (9). Adjust the frame length to fit. Rotate the strike plate (5) 90° if a box lock is used. Secure with 4 self-drilling screws (9).

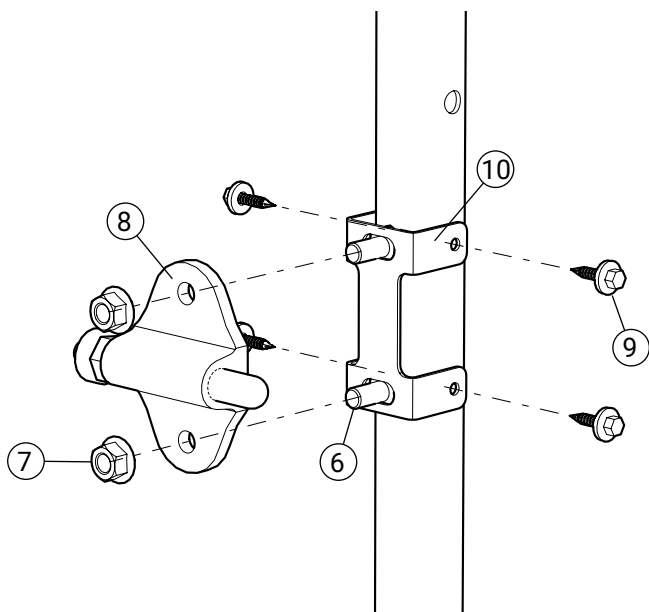**Box lock**


Start by fitting the box lock (8) with bolt (6) + nut (7) on the box mount (10); rotate 180° for the right/left version. Adjust the height to the gate. Use 4 self-drilling screws (9) per gate lock.

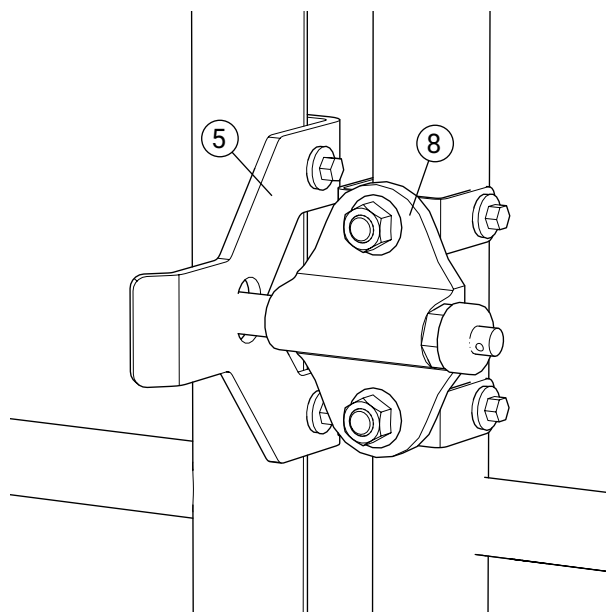**Box lock installed**

Adjust so that the box lock (8) and strike plate (5) align with each other.

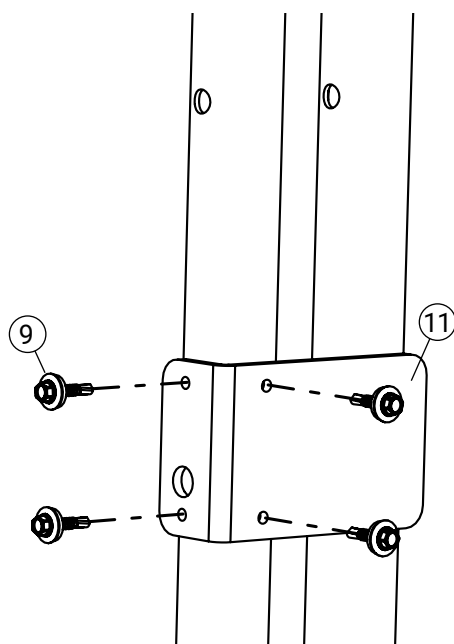**Gate stop**

Fit the gate stop (11) with 4 self-drilling screws (9).

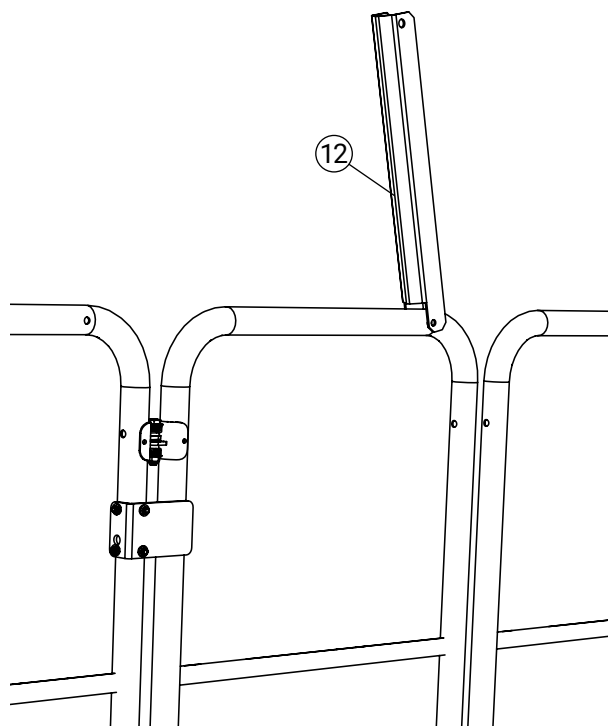**Gate with stop**

Install gate with stop. For extra safety, fit a drop bolt lock (12).