



FLEX+ Bollard


Installation Instructions

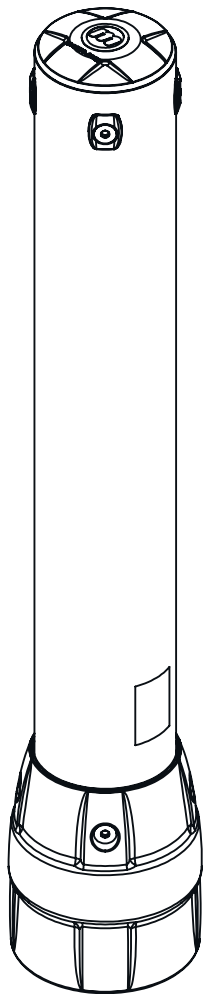

Components

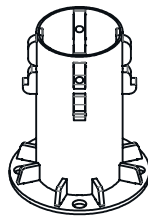


Base floor anchor

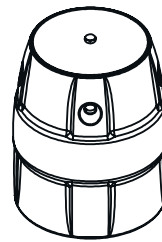


Base incl. fixing materials



Concrete anchors

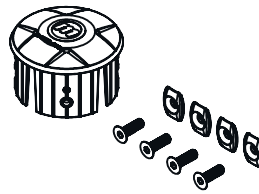


Cover cap incl. fixing materials

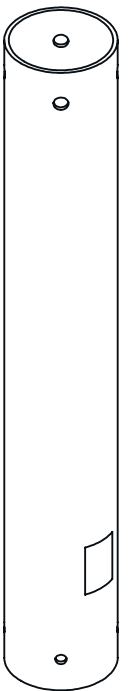

Post


Required Tools

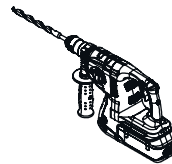

Hammer drill with
Ø12mm [1/2in] Masonry Bit



Impact driver

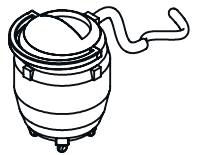

Vacuum



Marker



Extender








Hex Socket
17mm [3/4in]






Hex Bit
8mm [5/16in]


Step 1

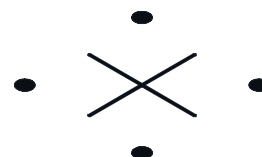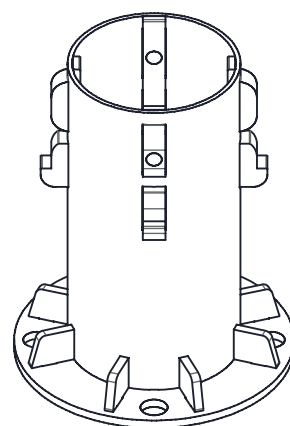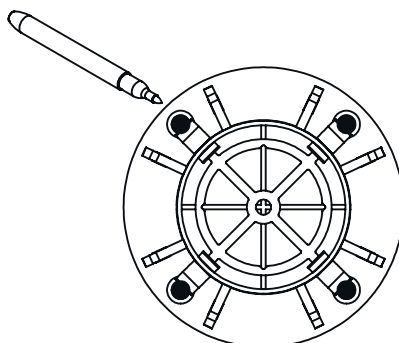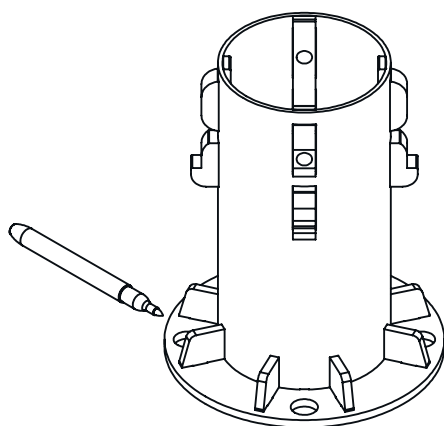



Step 2

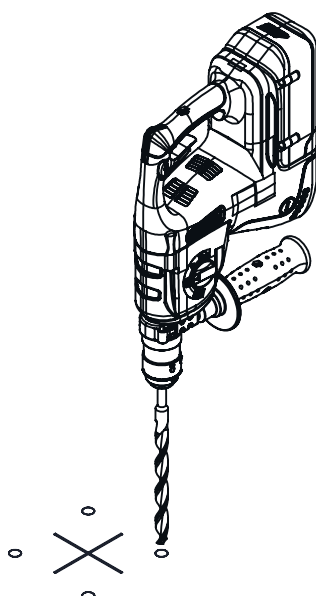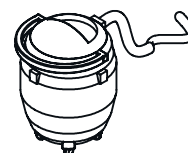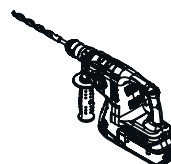

Anchor detail



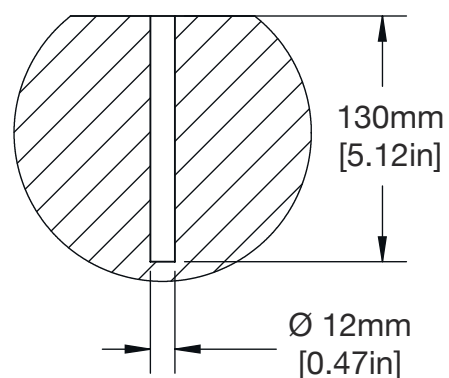


Step 3

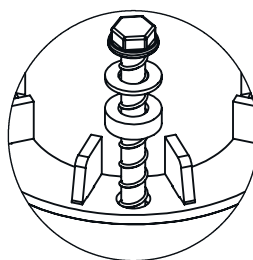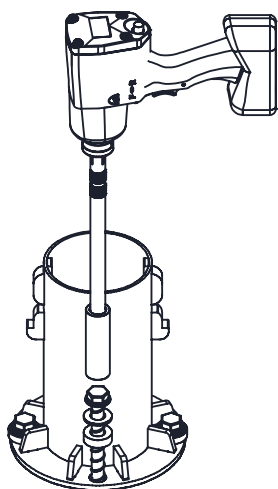


Anchor detail





Step 4

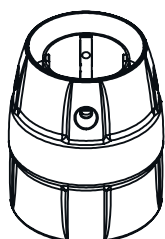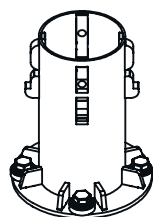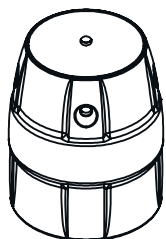


Step 5





Step 6

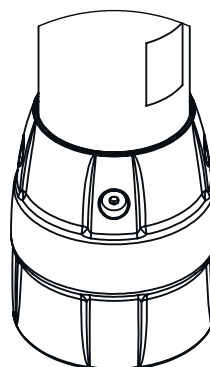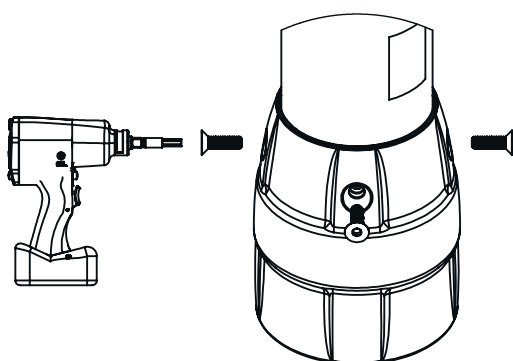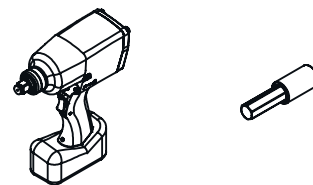

Step 7



Step 8

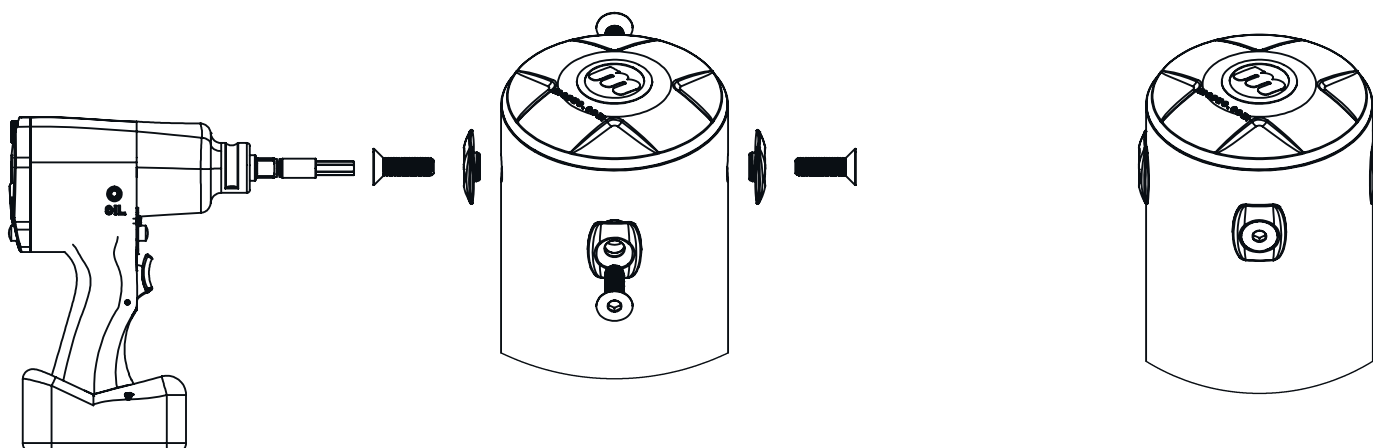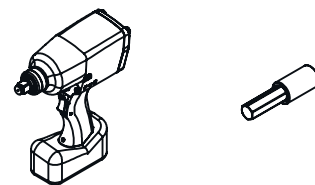

Installation complete

