



FLEX+ S-Line

Installations Instructions

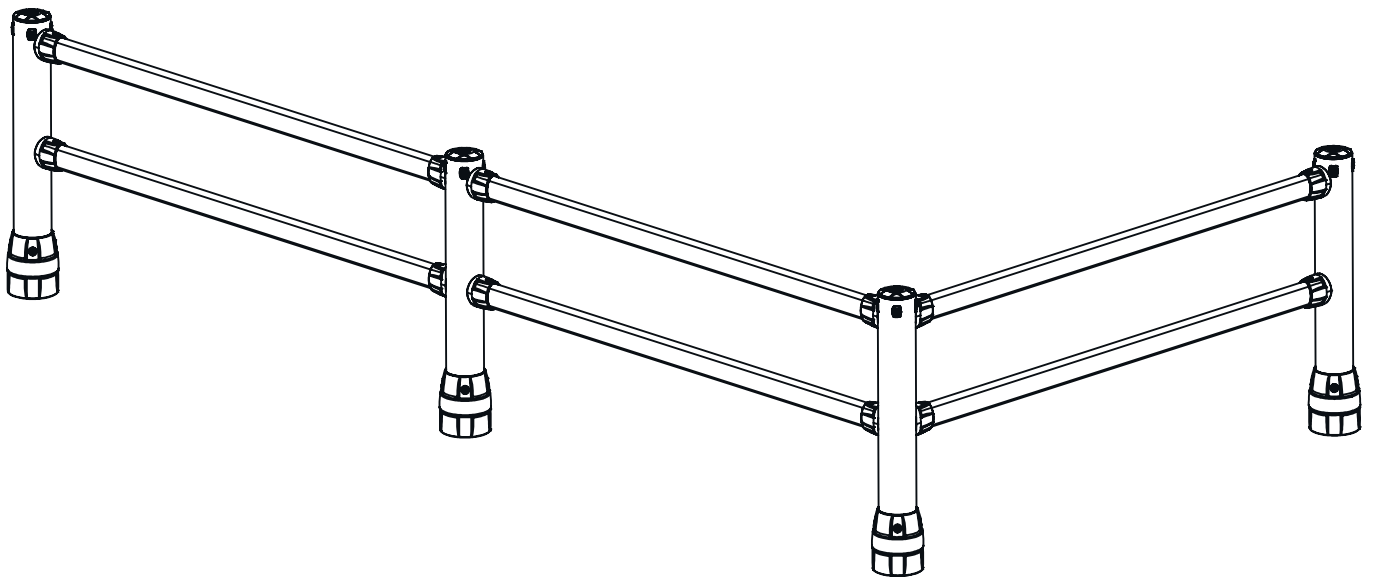


Components

Base incl. fixing materials

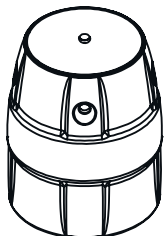

QTY: 1

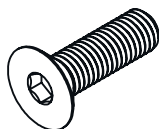

QTY: 4




QTY: 4




QTY: 4

Base floor anchor

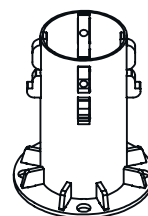

QTY: 1


Cover cap incl. fixing materials

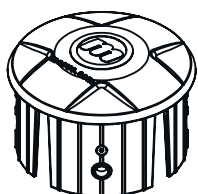

QTY: 1




QTY: 4

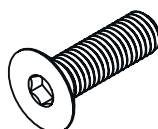


QTY: 4


S-Line Connector incl. fixing materials

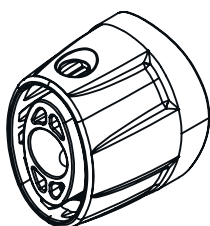


QTY: 1

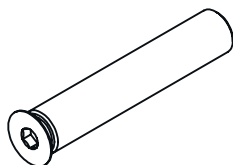

QTY: 1

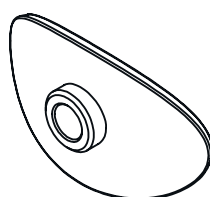

QTY: 1

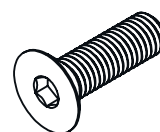

QTY: 1



QTY: 1




QTY: 1




QTY: 1

Components


Concrete Anchor

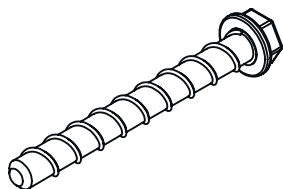


S-Line Post start/ende | centre | corner

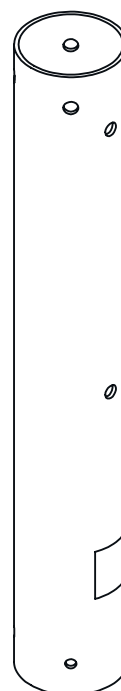

Crossbar S-Line

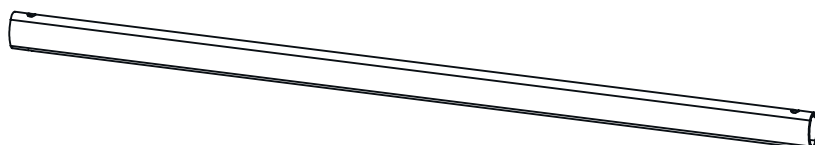

Required Tools

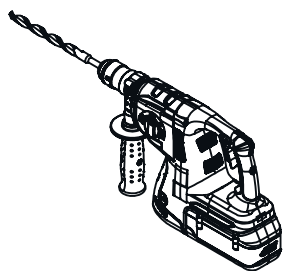


Hammer Drill With
 $\varnothing$ 12mm or $\varnothing$ 1/2in
Masonry Bit




Impact
Driver



Vacuum

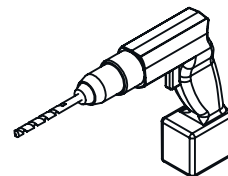


Drill with
 $\varnothing$ 20mm [3/4in] Bit

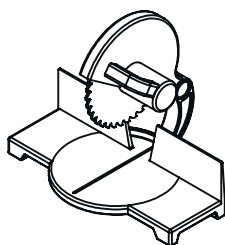

Mitre Saw



Hex Key
8mm [5/16in]

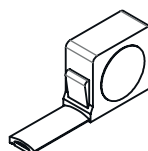

Measuring Tape



Socket Extender




Hex Socket
17mm [3/4in]



Hex Bit
8mm [5/16in]



Chalk Line




Marker




PPE recommended: High Visibility Vest, Steel Toe Boots, Work Gloves, Ear Protection, Dust Mask, Eye Protection.

Step 1

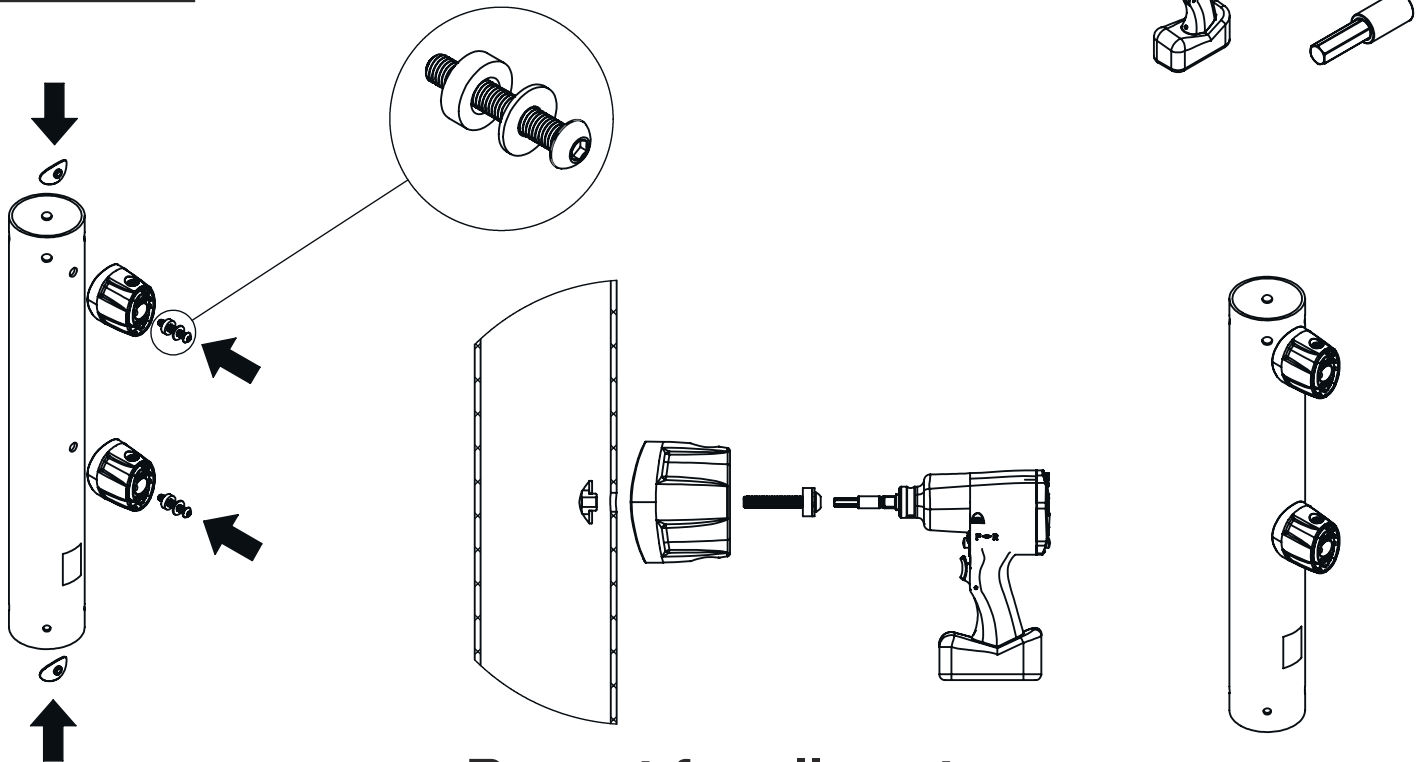


Repeat for all posts

Step 2

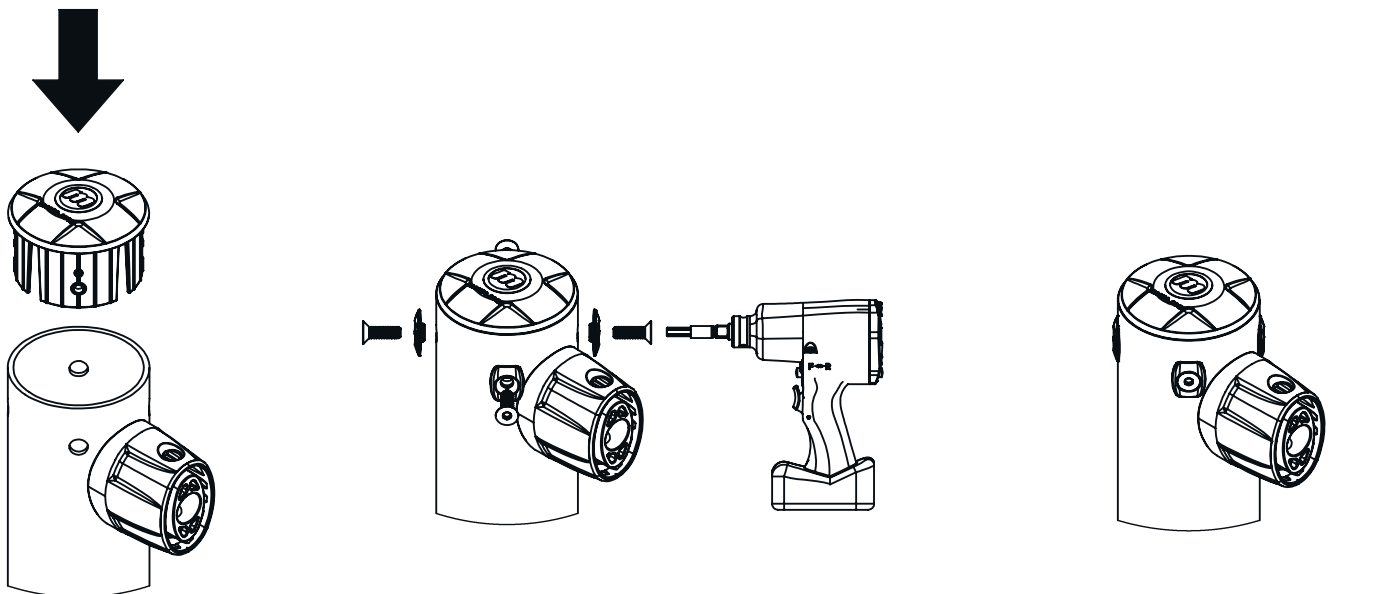


Repeat for all posts

Step 3

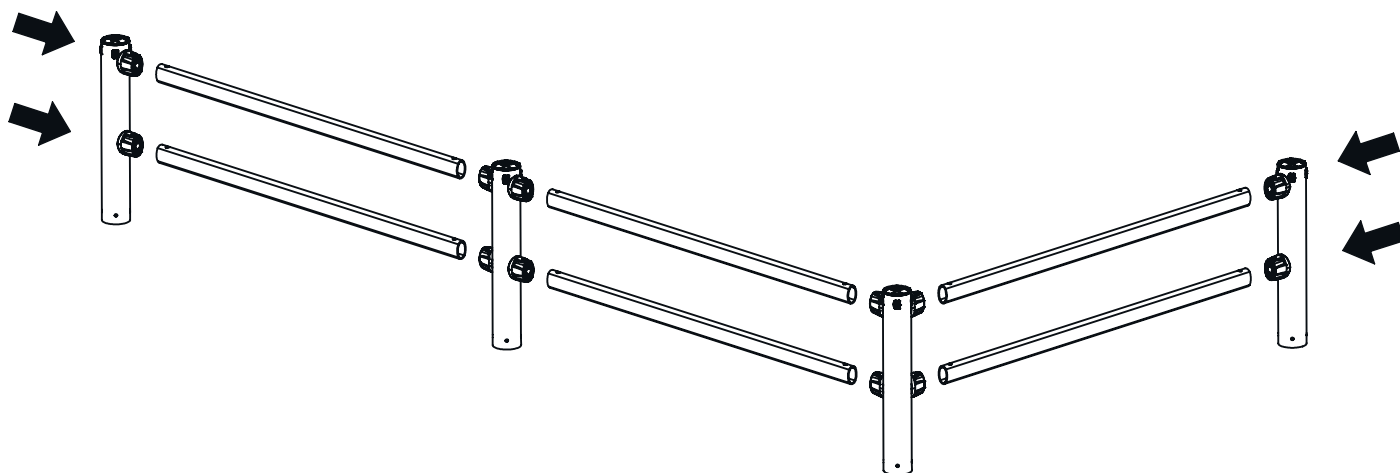


Step 4

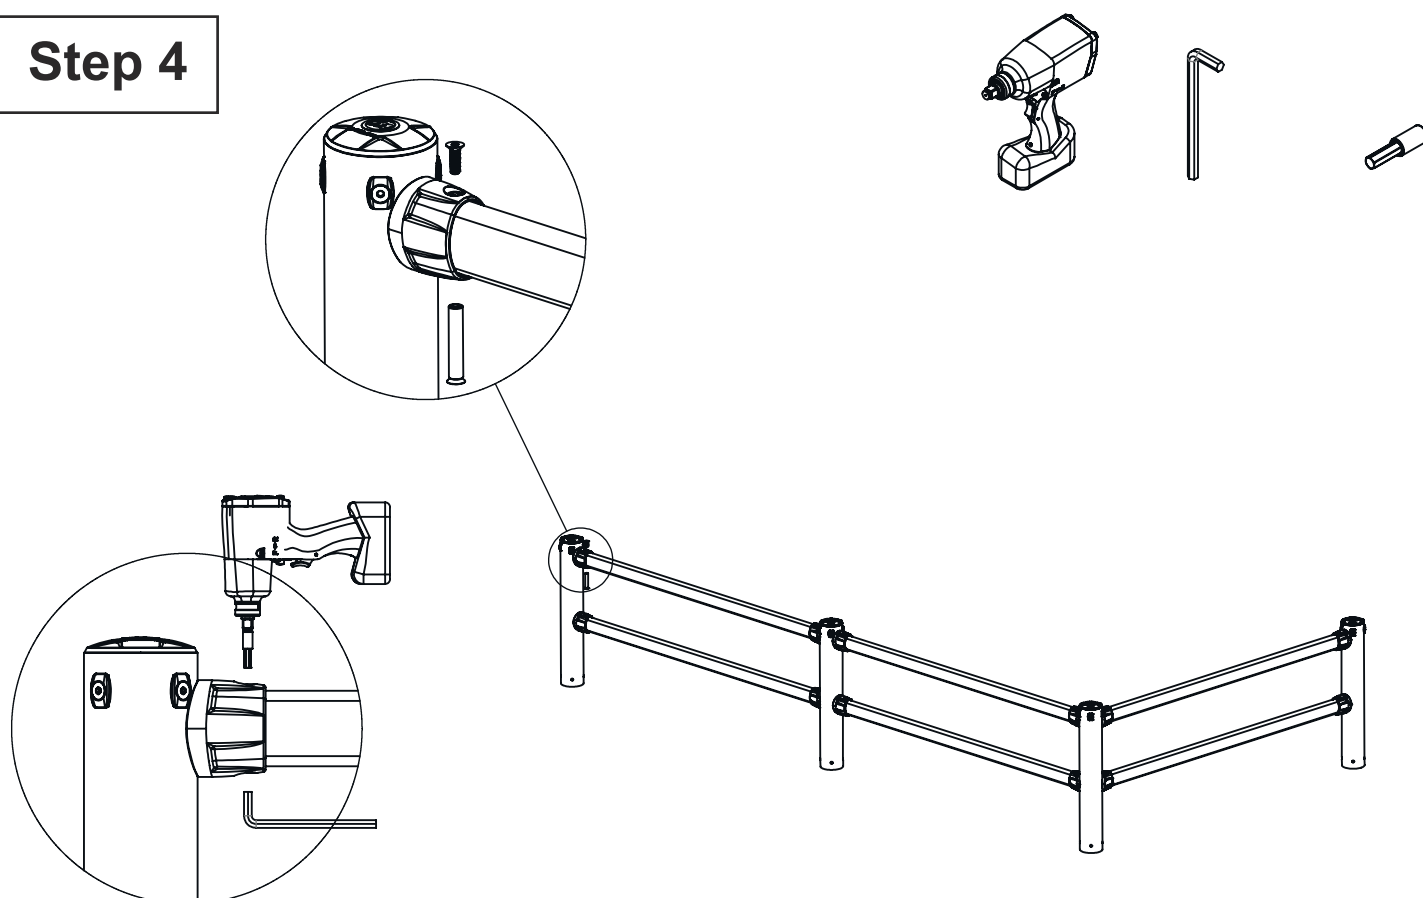


Repeat for all connectors




Step 5

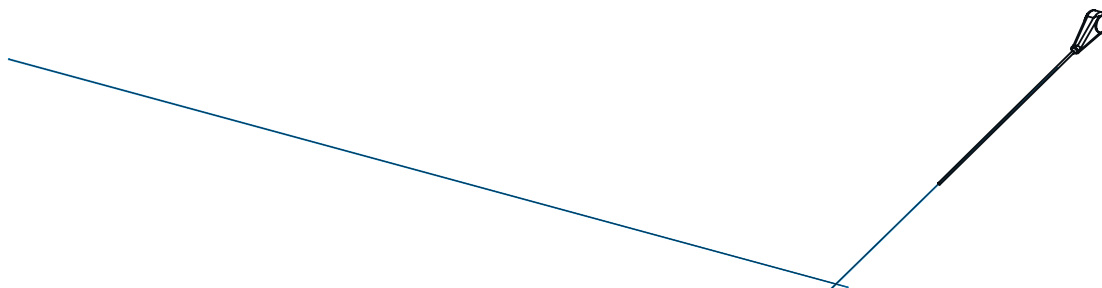






Step 6

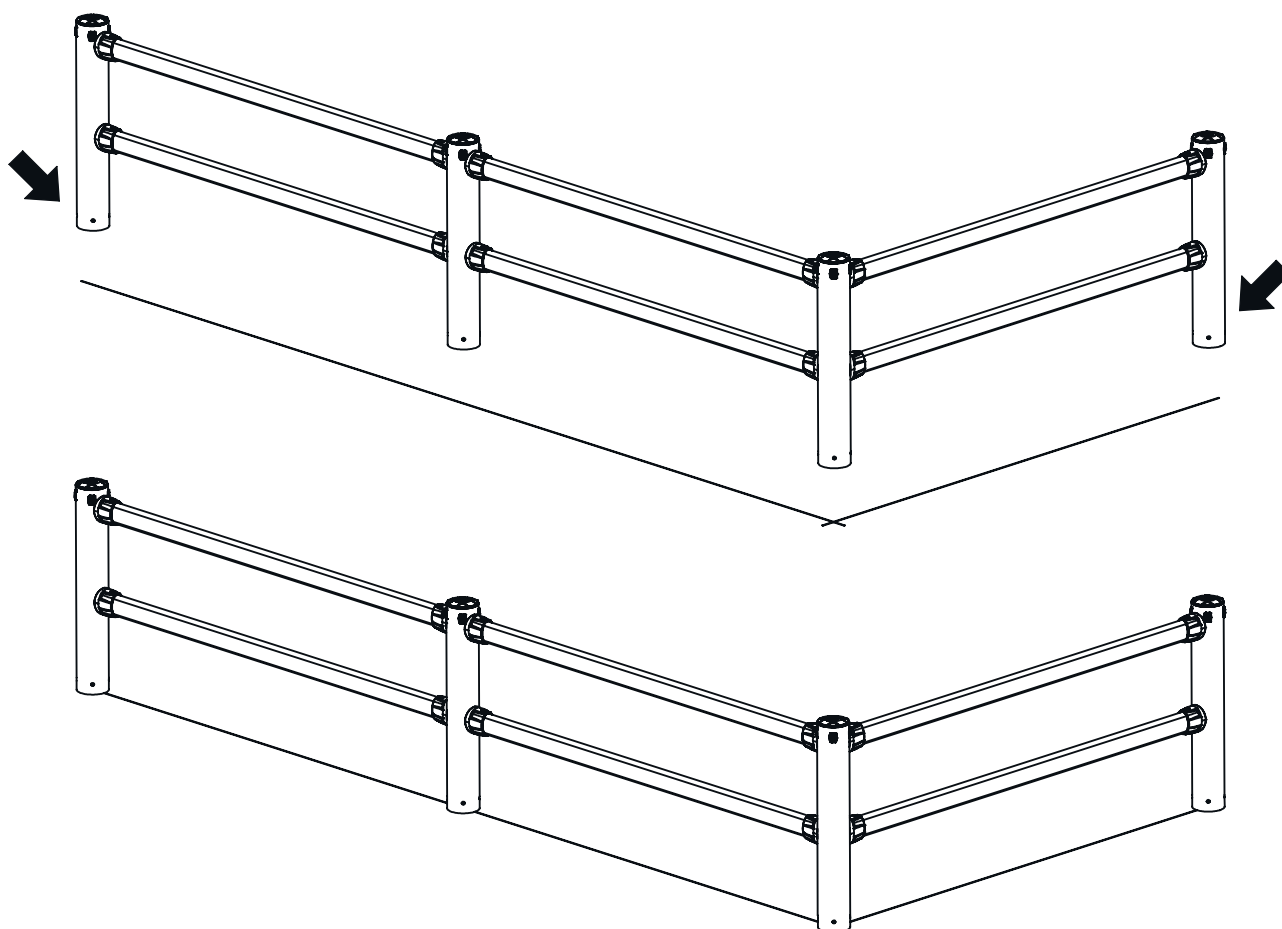

Step 7

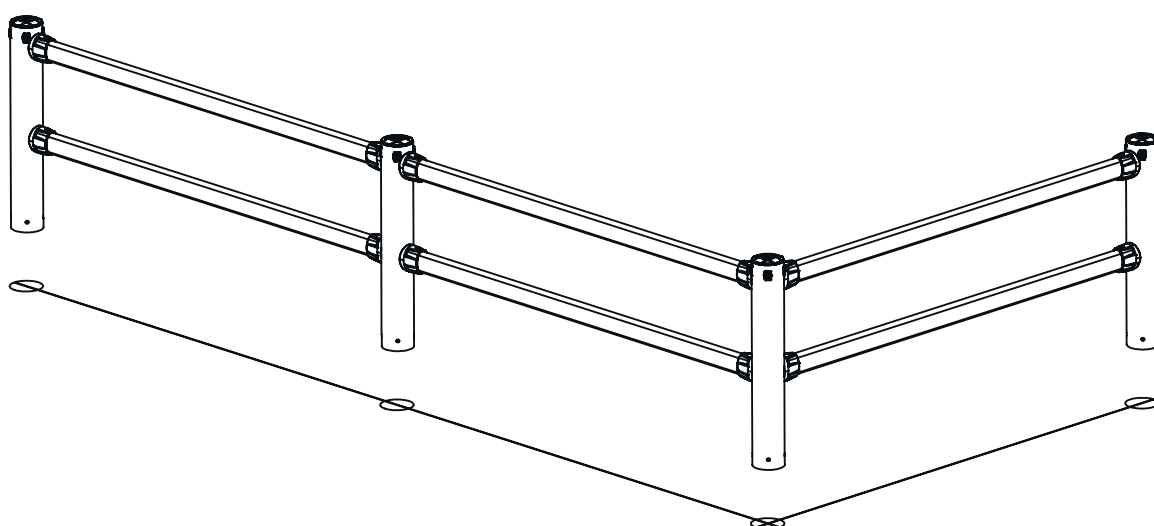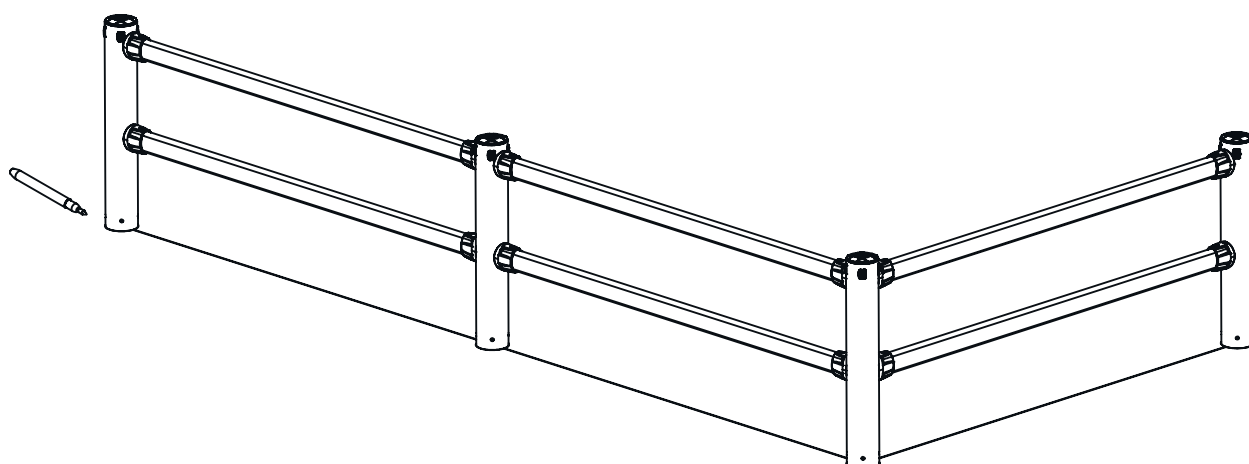



Step 8

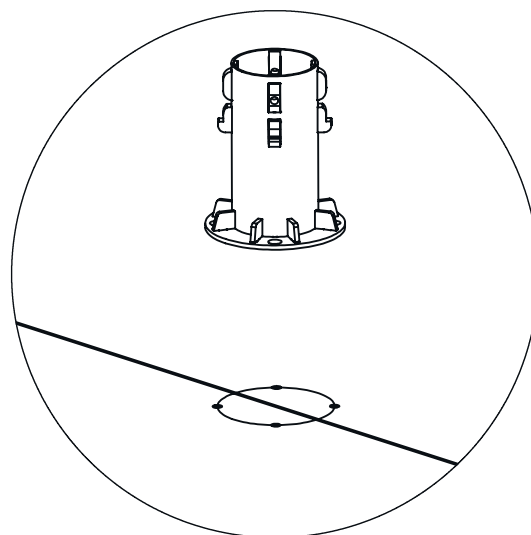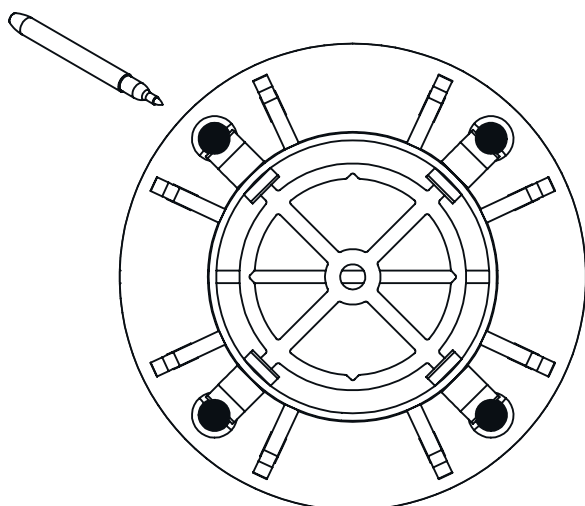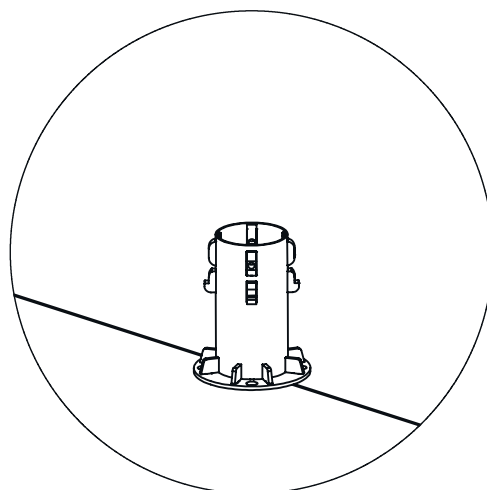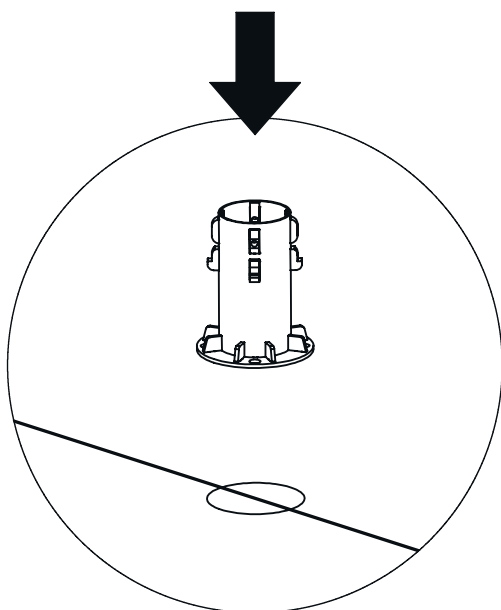


Repeat for all base four anchor

Step 9


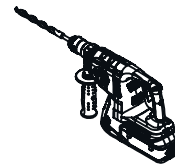
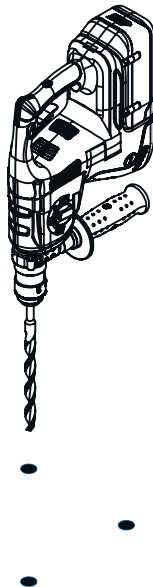


Anchor detail

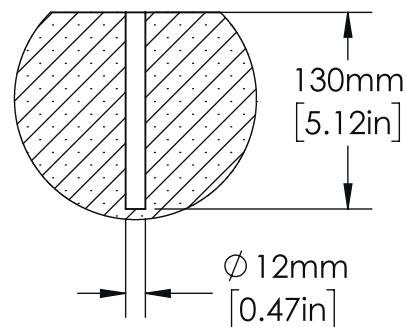

- PPE recommended: High Visibility Vest, Steel Toe Boots, Work Gloves, Ear Protection, Dust Mask, Eye Protection.
- Clean concrete dust by running the vacuum during drilling.


Step 10

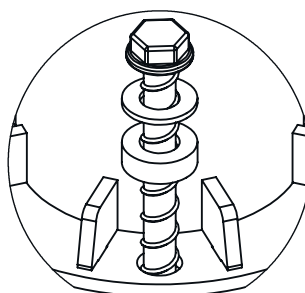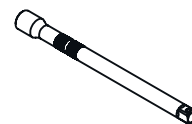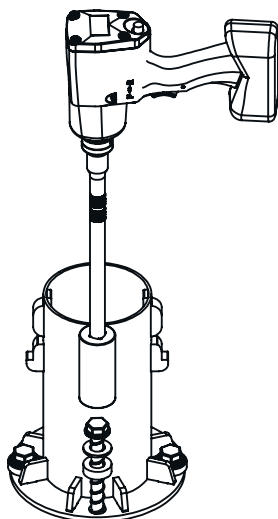


Anchor detail

Repeat for all base four anchor


Step 11

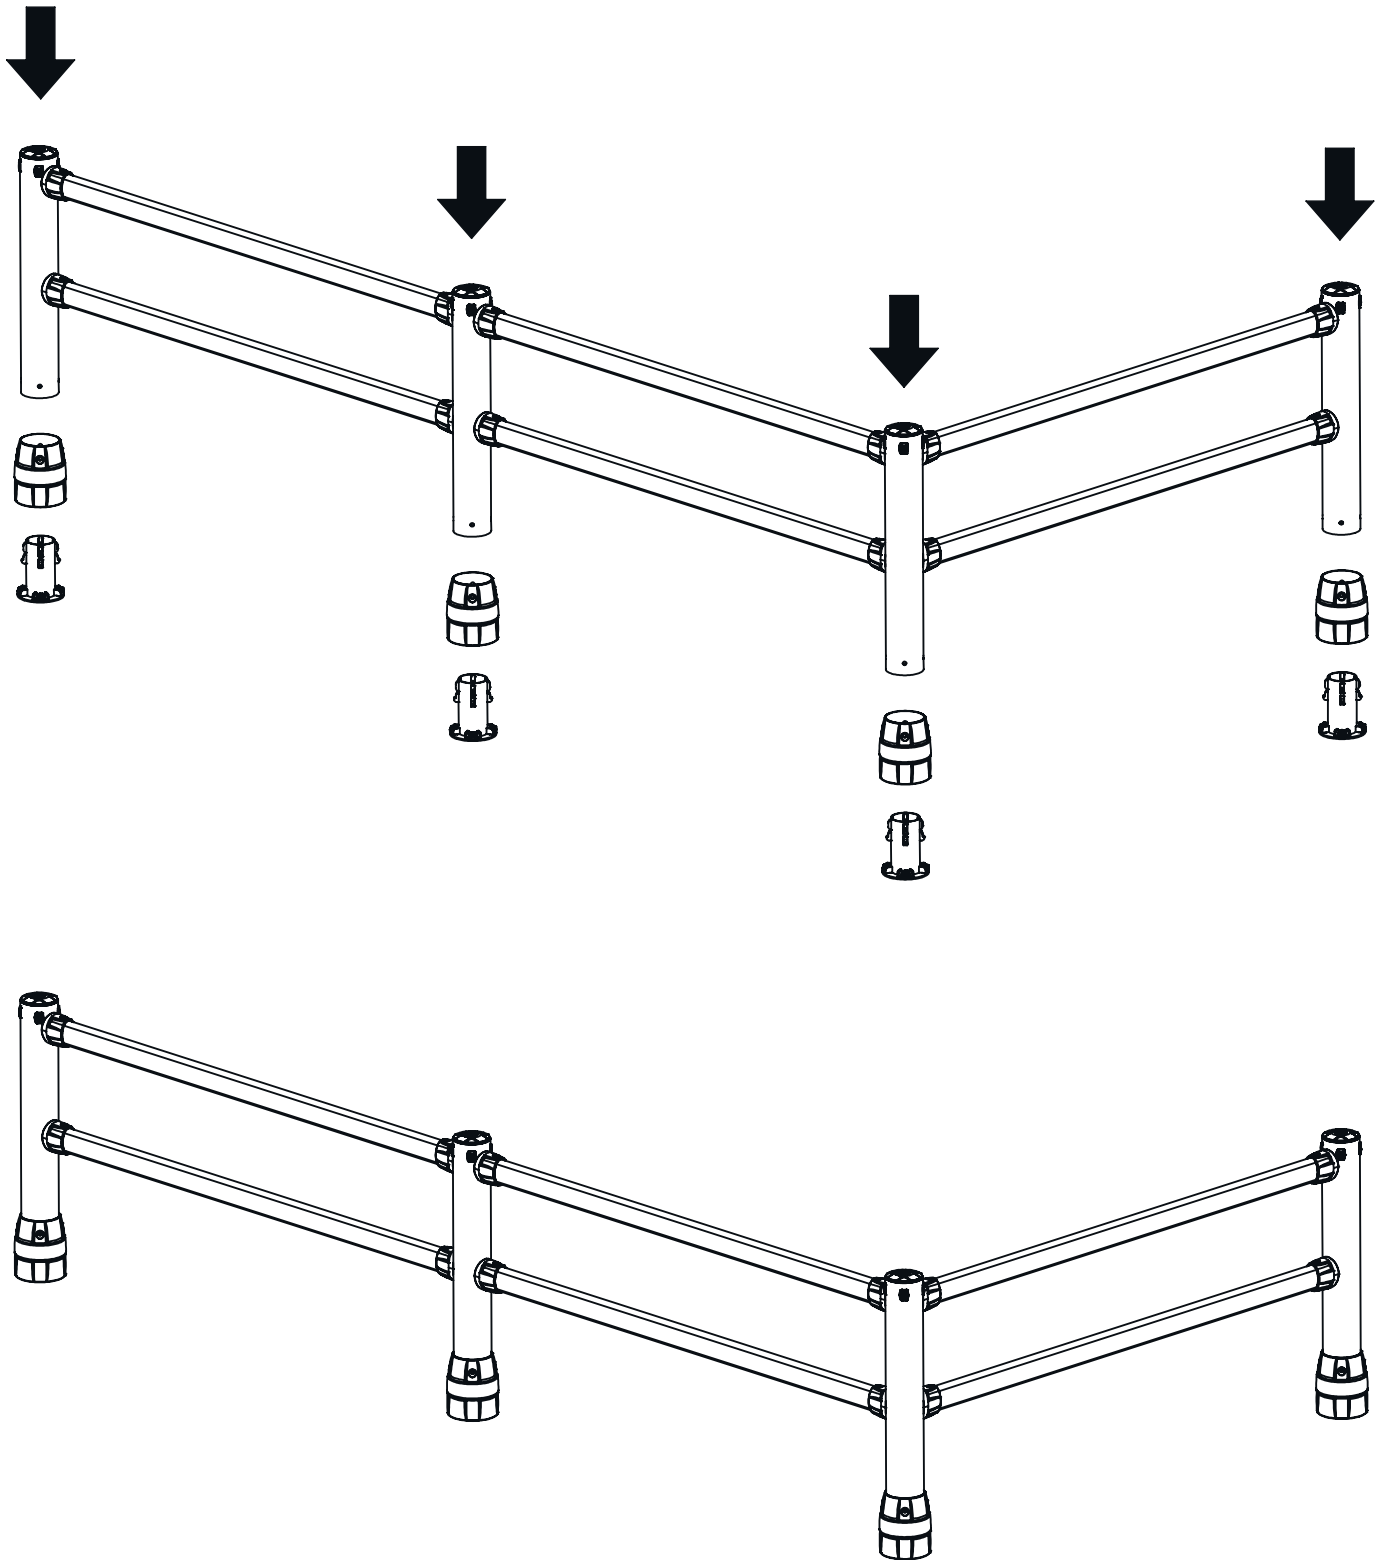

Step 12

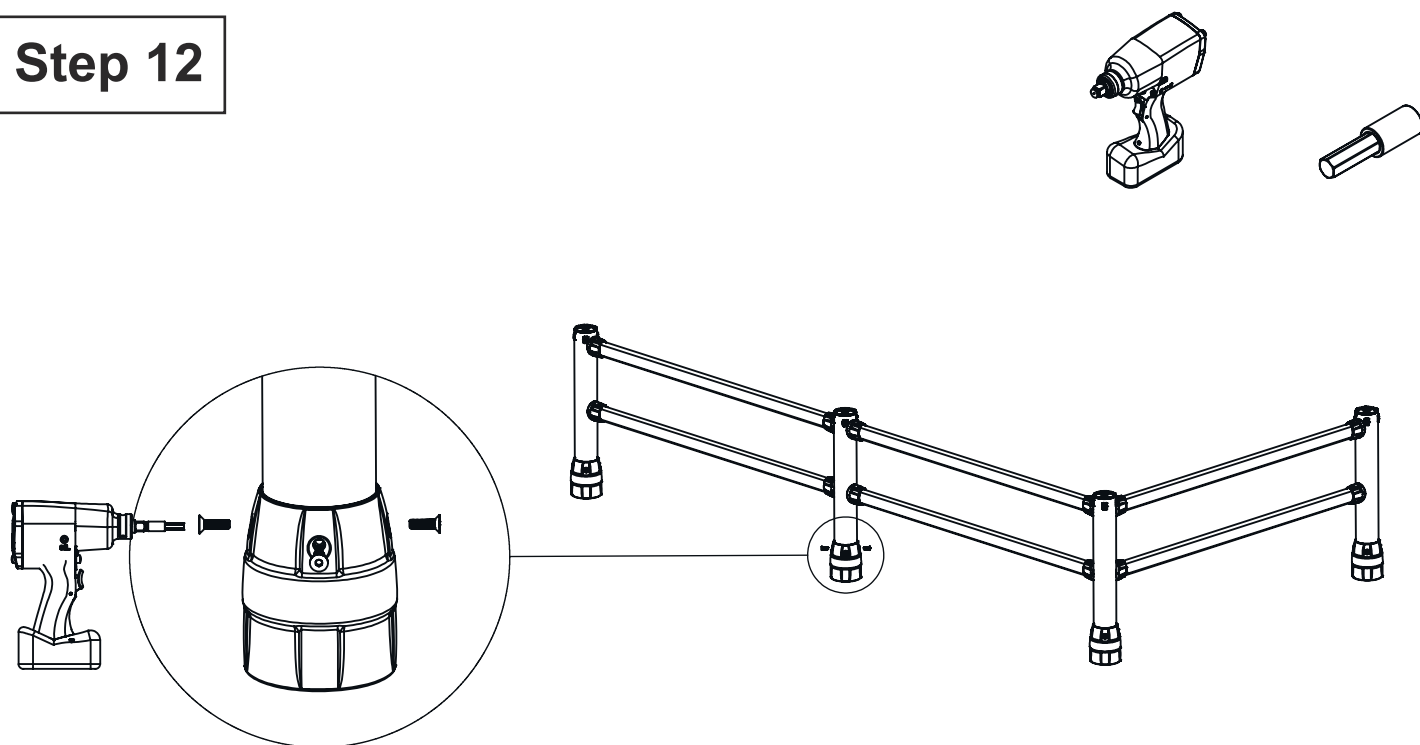


Installation Complete

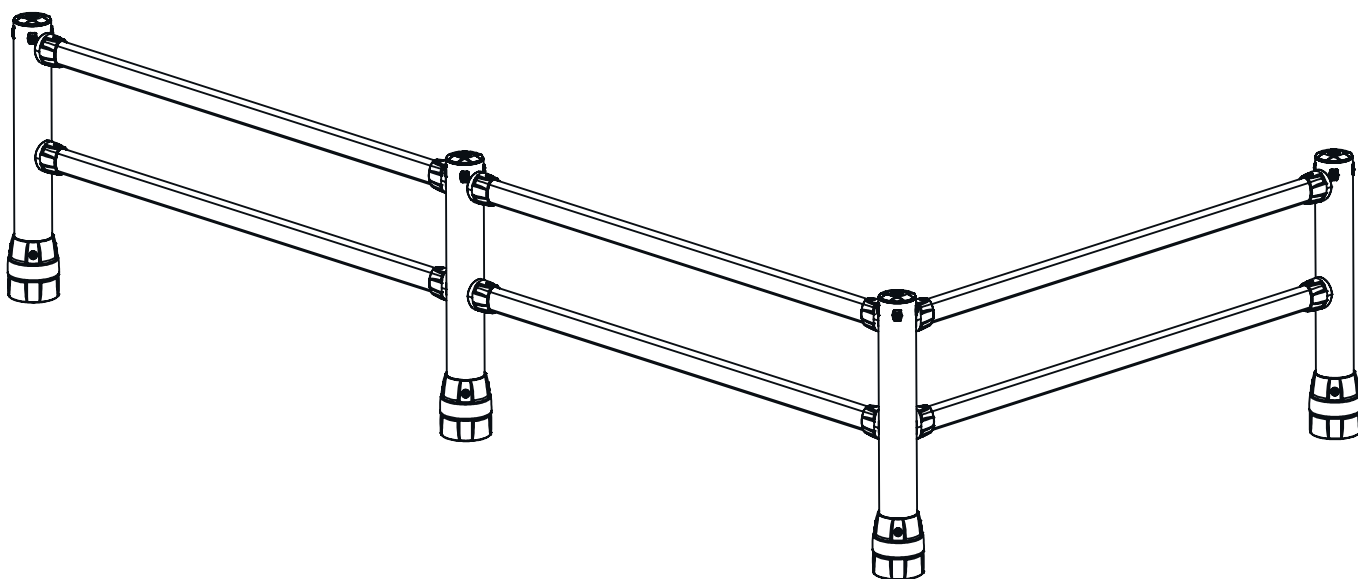


Appendix A: Custom Length Rails





Step A1

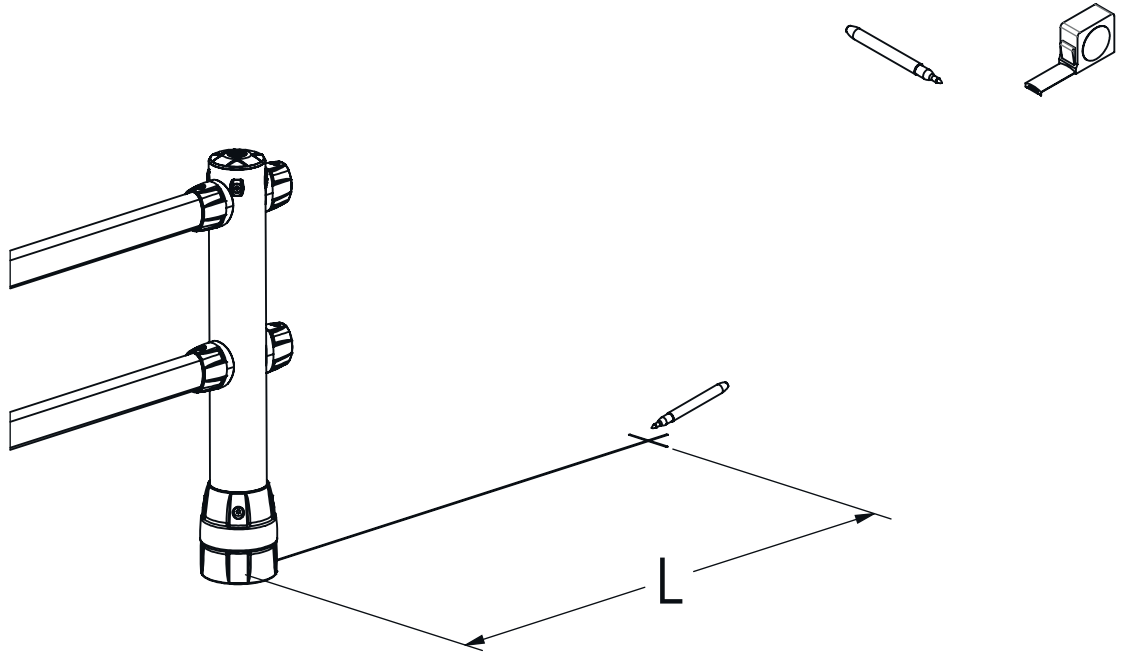


Step A2

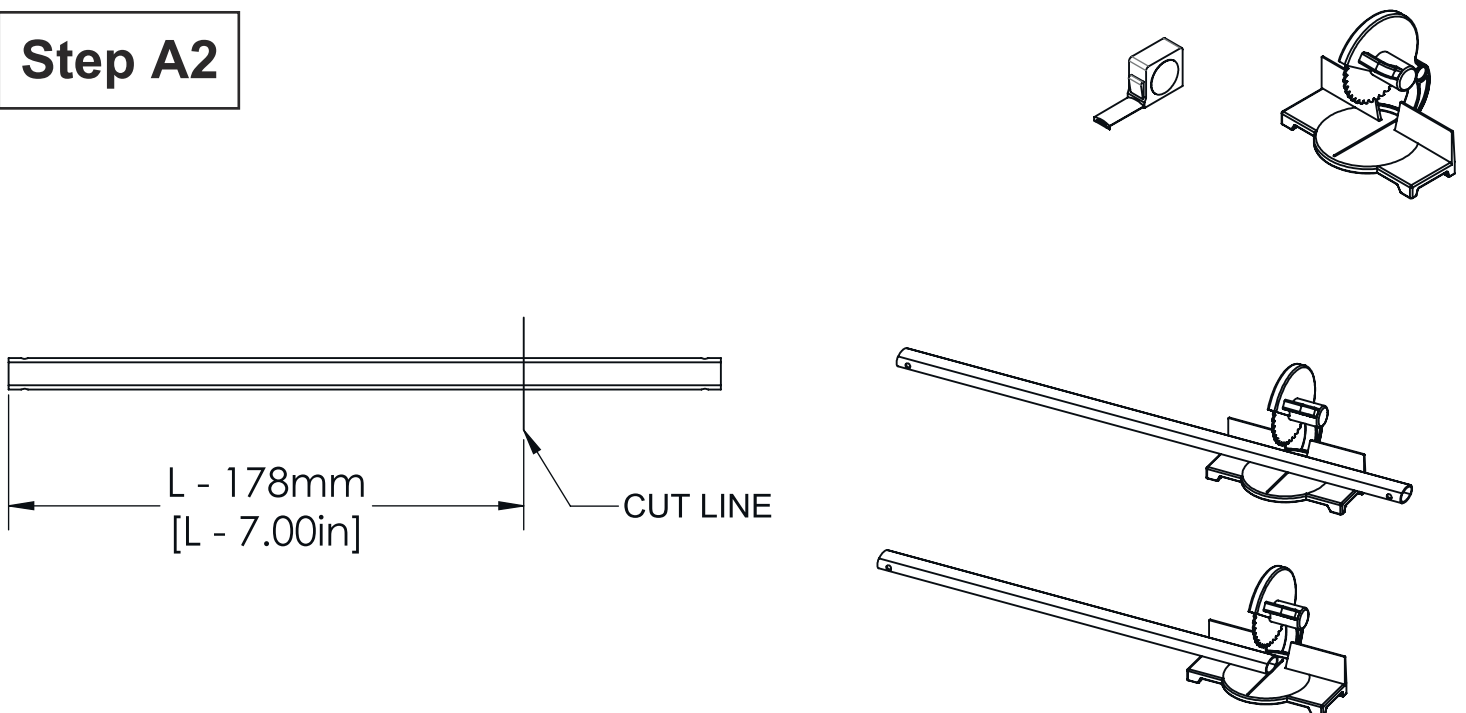


Step A3

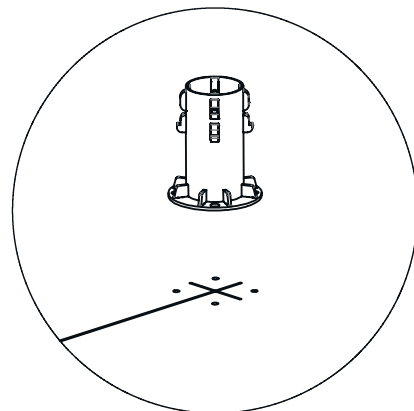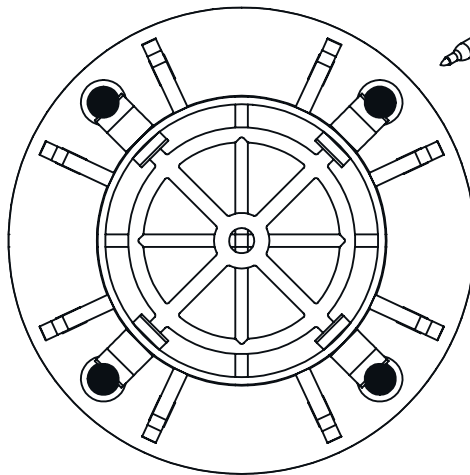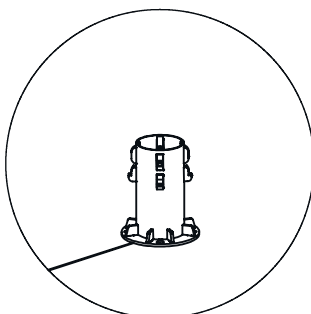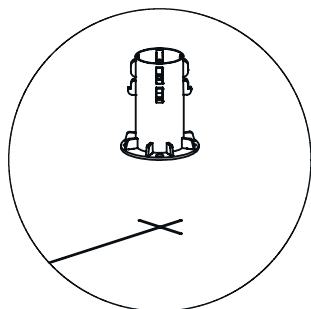

Step A4


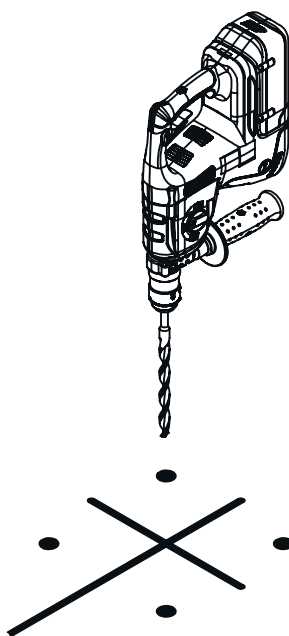


Anchor detail


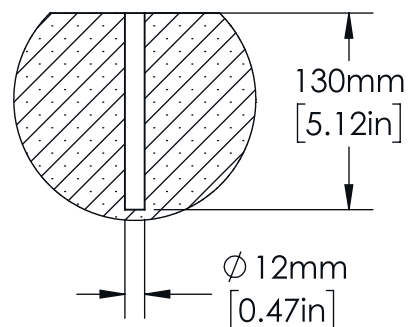


- PPE recommended: High Visibility Vest, Steel Toe Boots, Work Gloves, Ear Protection, Dust Mask, Eye Protection.
- Clean concrete dust by running the vacuum during drilling.


Step A5

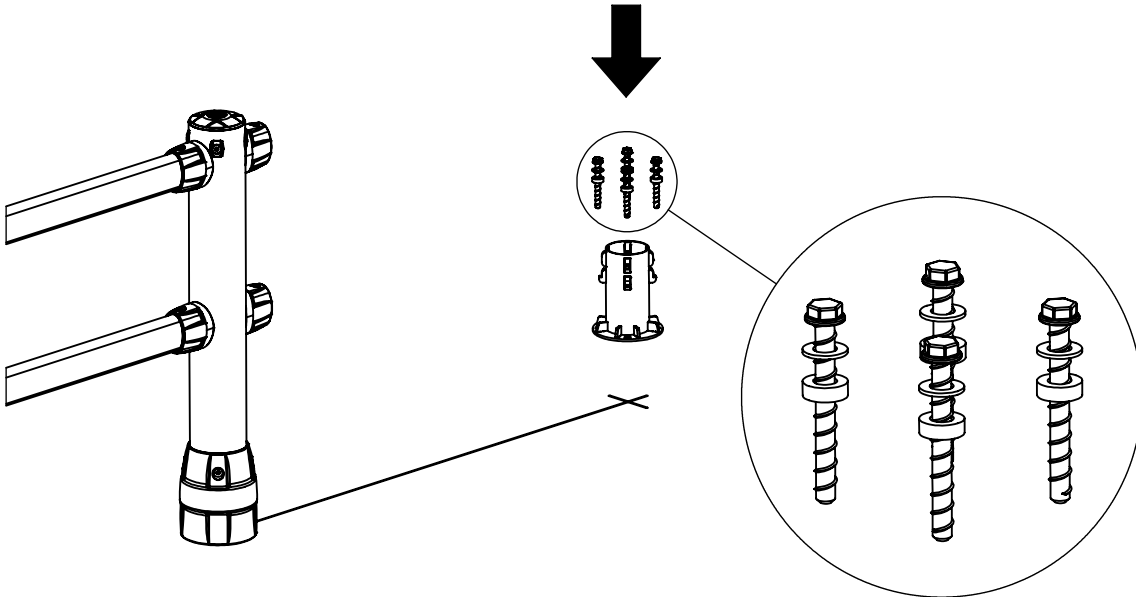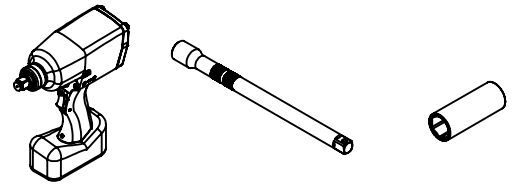




Step A6

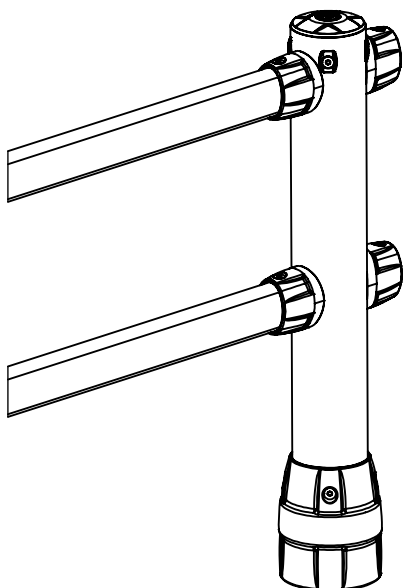


Step A7

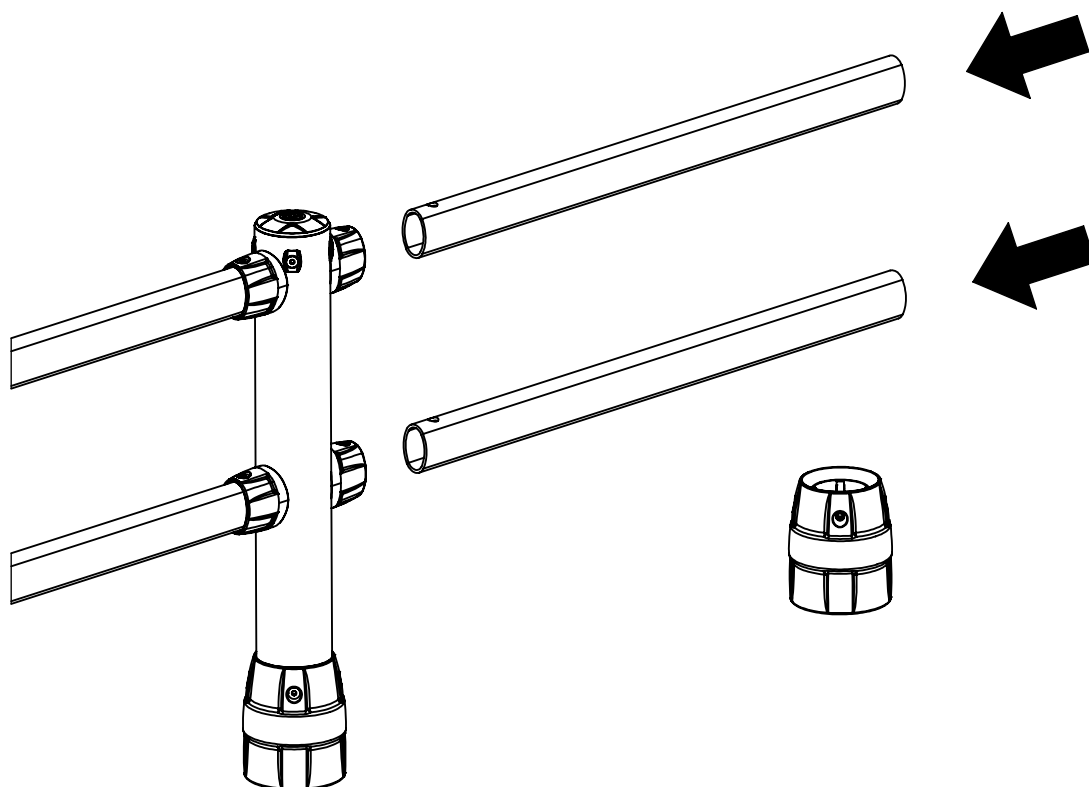



Step A8

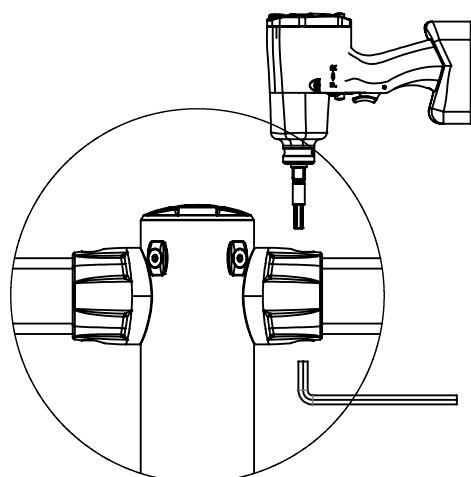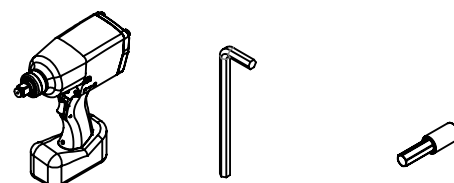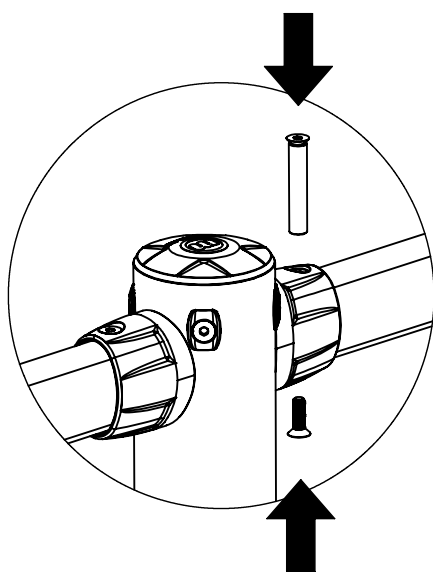



Step A9

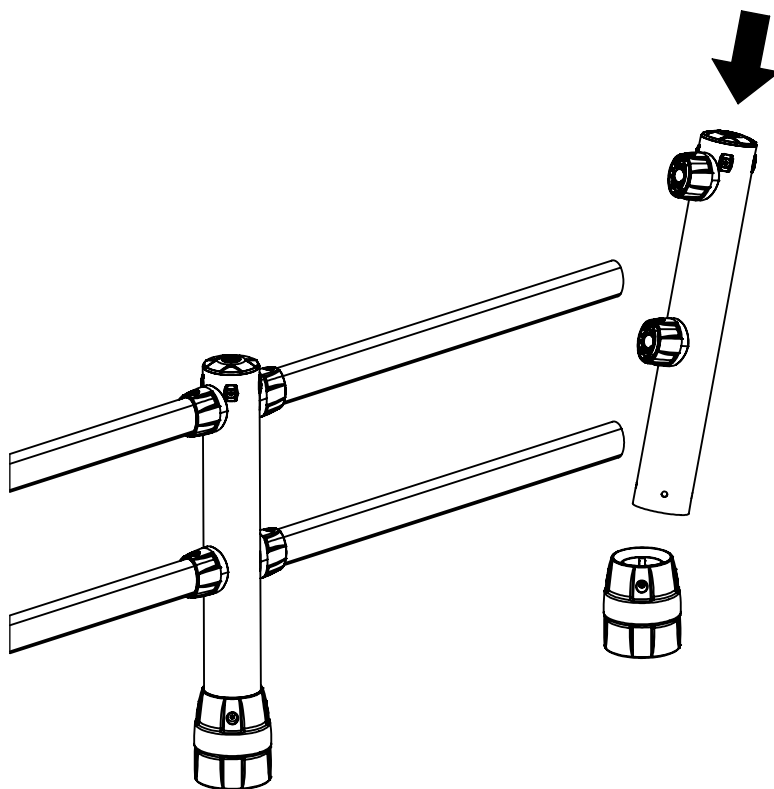

Step A10

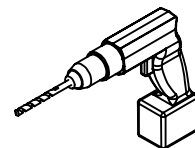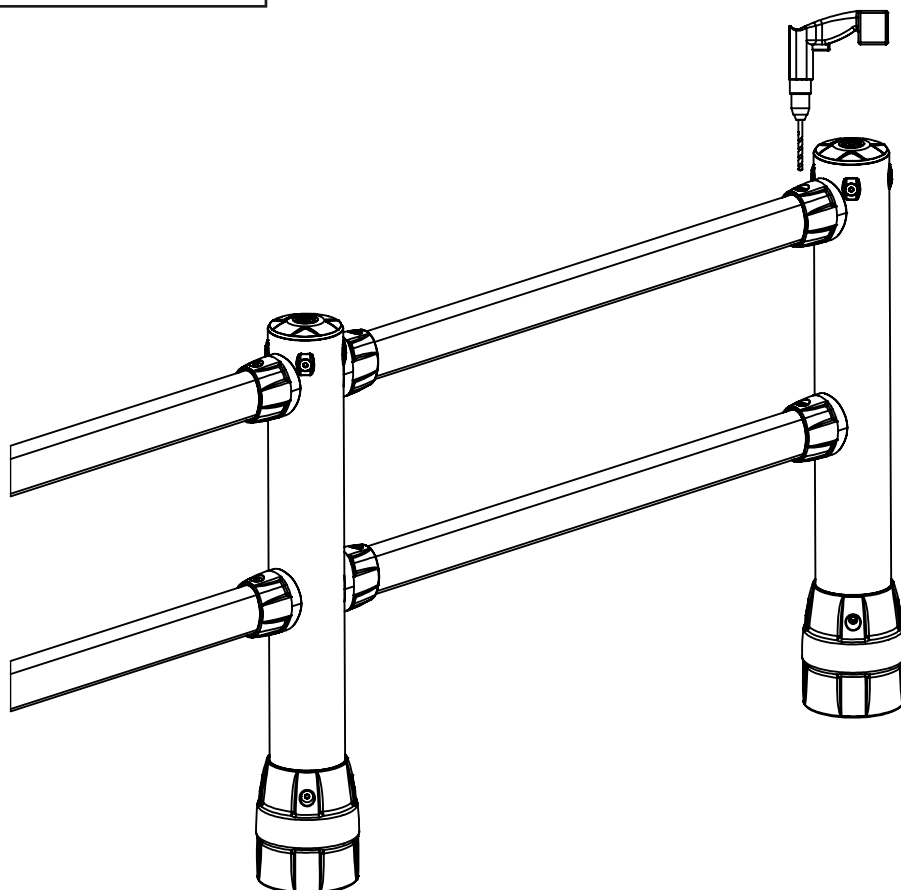

Step A11

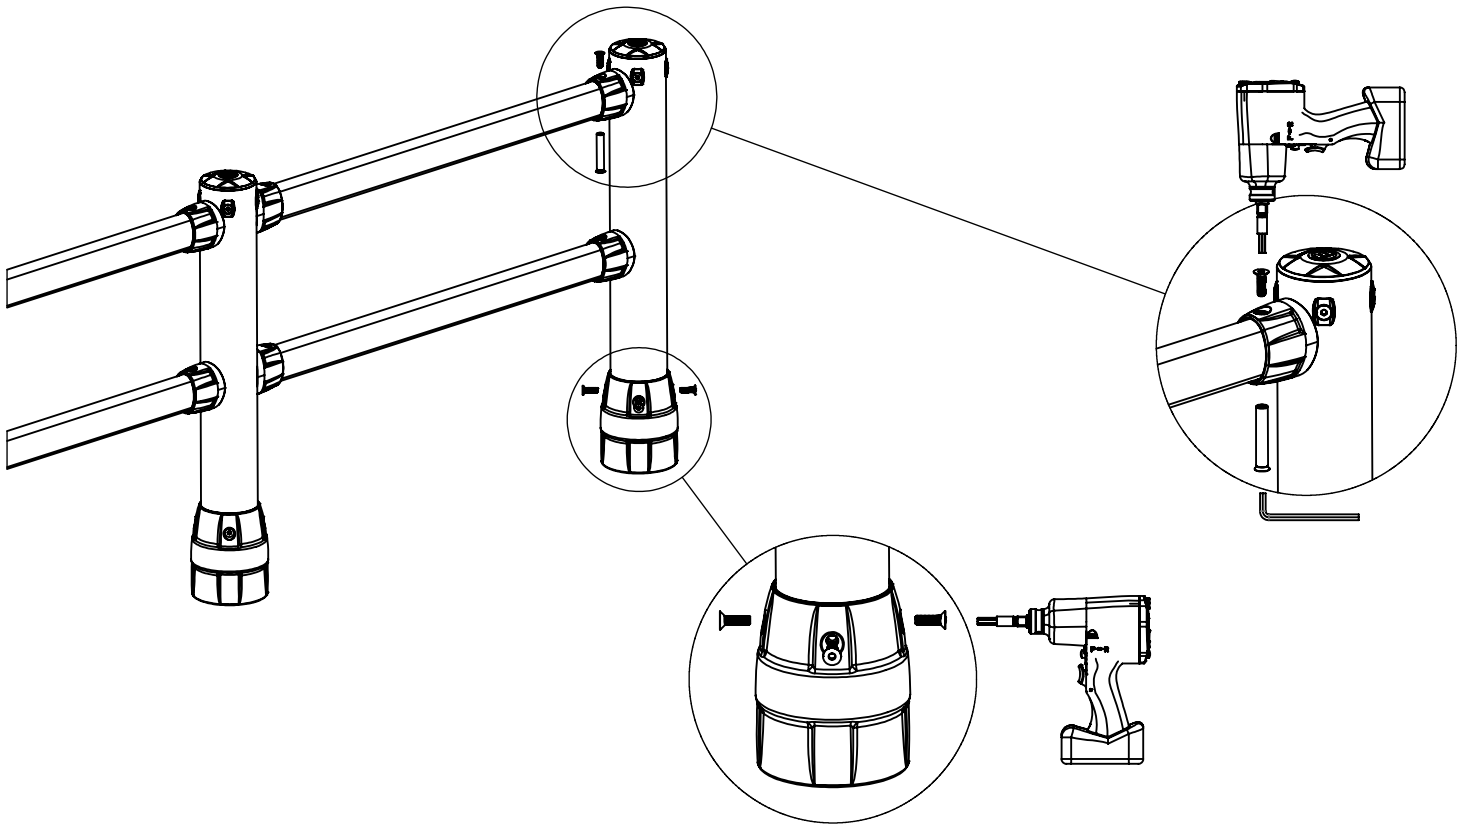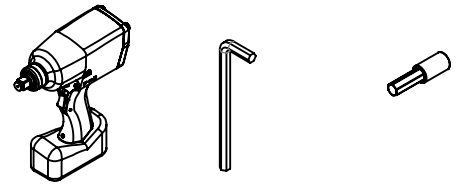

Installation Complete

