



	Detail	Item no.
1	Railing	See table
2	Ground mount single	UM1000
3	Ground mount double	UM2000
4	Locking washer	UL4200
5	Bolt M10x20	BU1201/BU1200
6	Flange nut M10	MU1001/MU1010

	Detail	Item no.
7	Kick plate	SL0410/SL0510/SL0710/ SL1010/SL1510/SL2010
8	Self-drilling screw 5,2x22	SS5221/SS5225
9	Gull-wing coupling	MK4200
10	Tube coupling	KP4277

Railing	c/c
UI2042 / UB2042	1996
UI1542 / UB1542	1496
UI1042 / UB1042	996
UI0742 / UB0742	696
UI0542 / UB0542	496
UI0442 / UB0442	396


1. Casting mounts

Dig holes Ø 50 cm. Depth 45 cm. c/c according to table. Fill with crushed stone or concrete. Turn the single mounts (2) so they angle inward toward the double mounts (3).

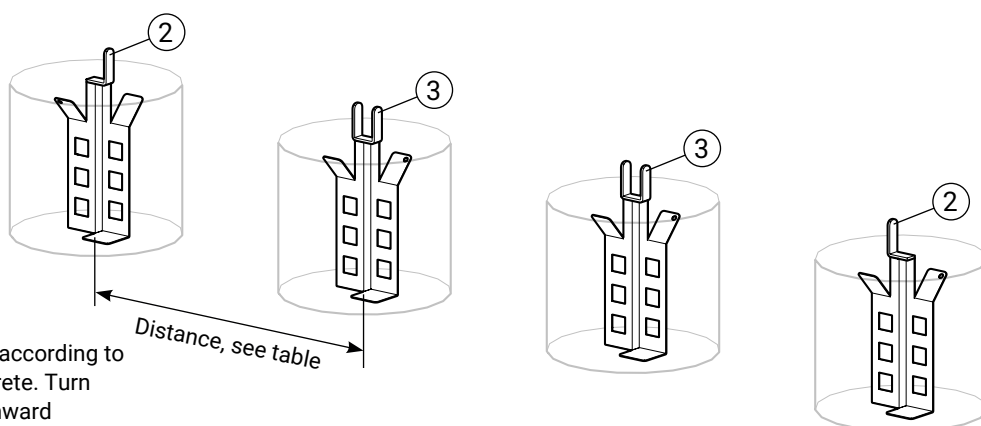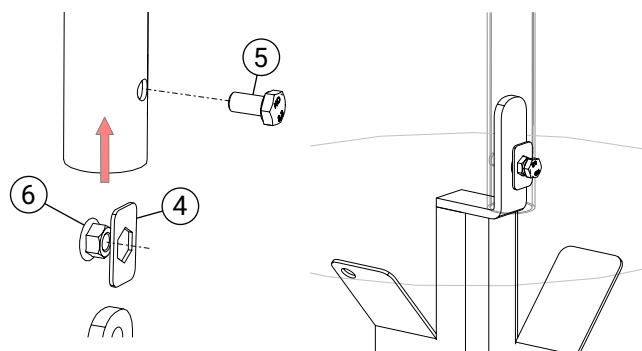


2. Installing the railing lock

Assemble a nut (6) + locking washer (4) into a railing lock. Insert into the railing tube and fit a bolt (5).

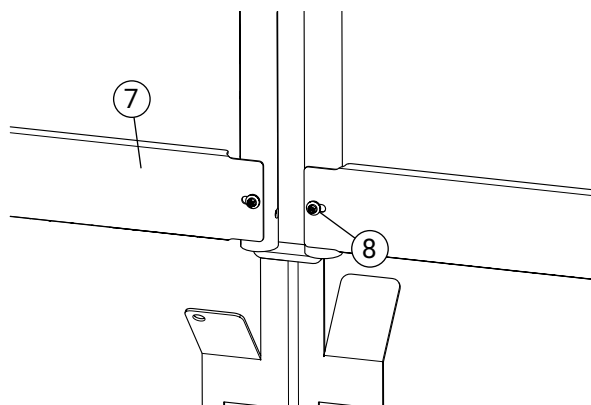

3. Installing the kick plate

Any kick plate (7) is fitted with 2 self-drilling screws (8).

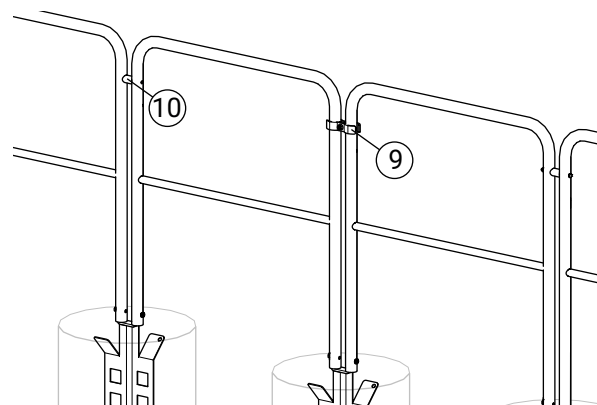

4. Installing couplings

Fit a gull-wing coupling (9) or tube coupling (10) between the railings.