MORAVIA

FLEX+ L-Line
with Under-run Guard
Installations Instructions

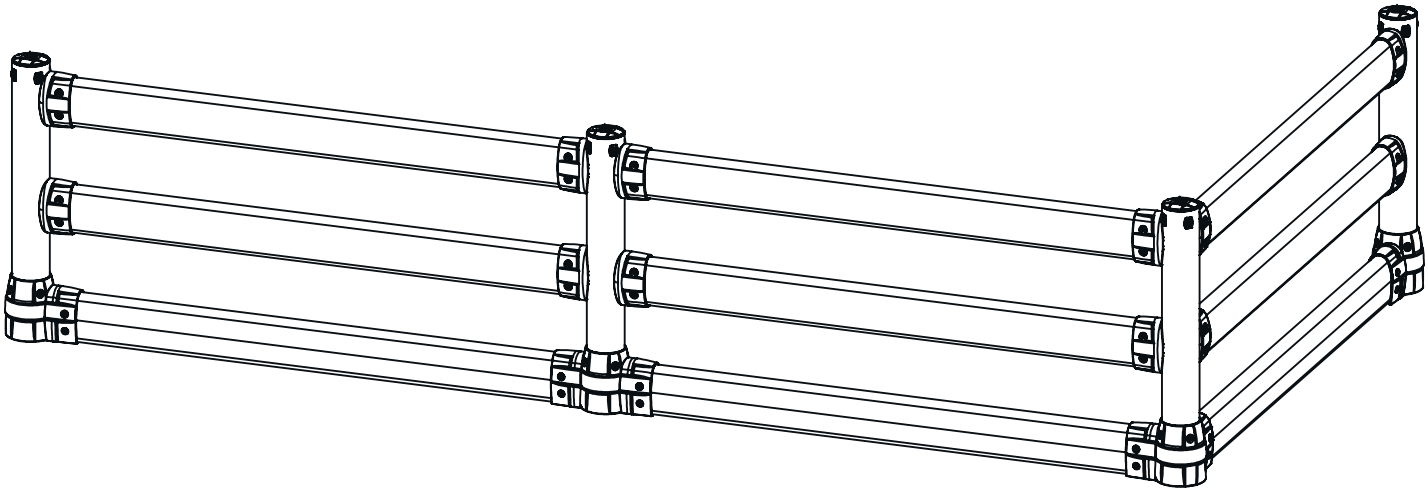

Components

Base start/end incl. fixing materials

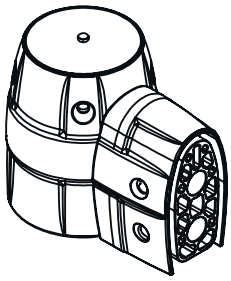

QTY: 1

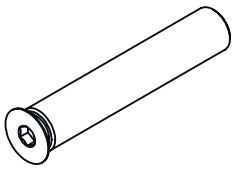

QTY: 2

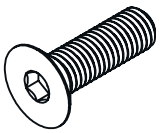

QTY: 6

QTY: 4



QTY: 4

Base centre incl. fixing materials

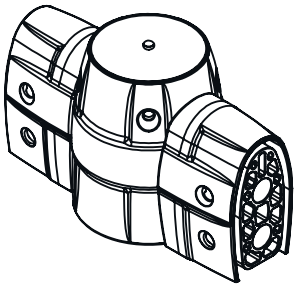

QTY: 1

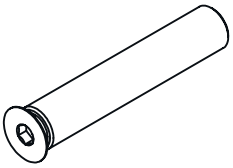

QTY: 4

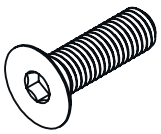

QTY: 8

QTY: 4

QTY: 4

Base corner incl. fixing materials

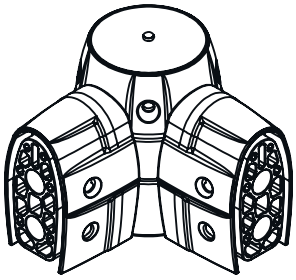

QTY: 1

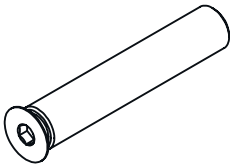

QTY: 4

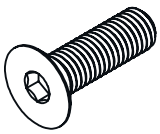

QTY: 8

QTY: 4

QTY: 4

Components

Base floor anchor

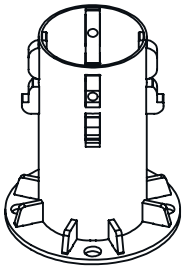

Cover cap incl. fixing materials

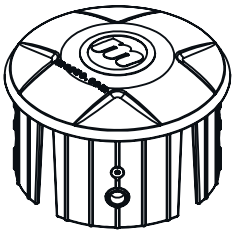

QTY: 1

QTY: 4

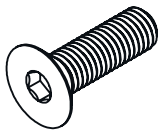

QTY: 4

L-Line Connector incl. fixing materials

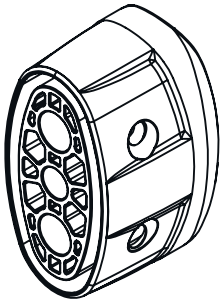

QTY: 1

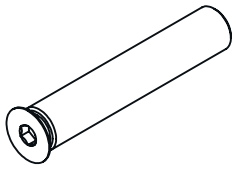

QTY: 2

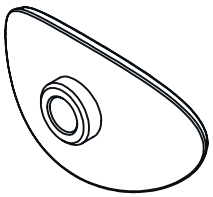

QTY: 2

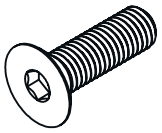

QTY: 2

QTY: 2

QTY: 2



QTY: 2

Components

Concrete anchor

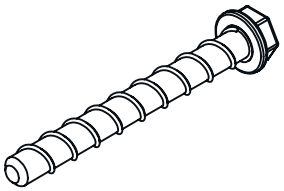

Crossbar Under-run Guard

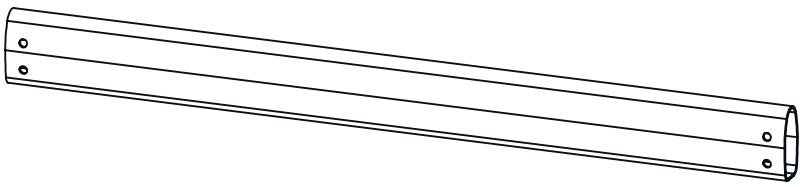

Crossbar L-Line

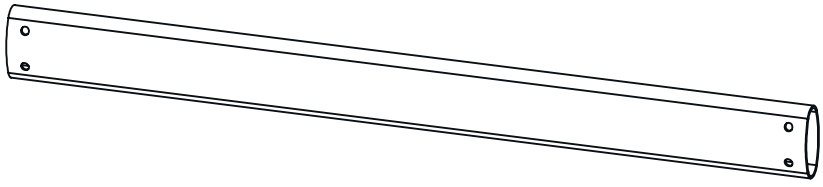

L-Line Post start/end | centre | corner

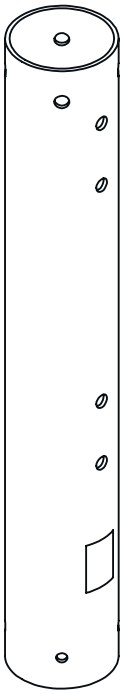

Required Tools

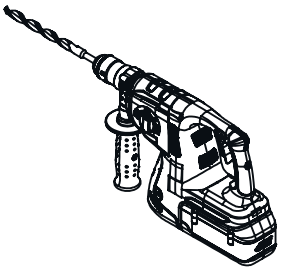

Hammer Drill With
∅12mm [1/2in] Masonry Bit

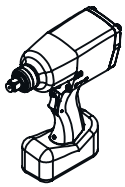

Impact
Driver

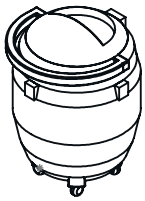

Vacuum

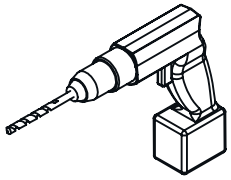

Drill with
∅20mm [3/4in] Bit

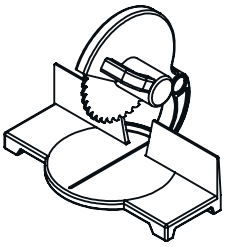

Mitre Saw

Hex Key
8mm [5/16in]

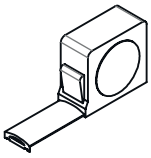

Measuring Tape

Socket Extender



Hex Socket
17mm [3/4in]



Hex Bit
8mm [5/16in]



Chalk Line



Marker

PPE recommended: High Visibilty Vest, Steel Toe Boots, Work Gloves, Ear Protection, Dust Mask, Eye Protection.

Step 1

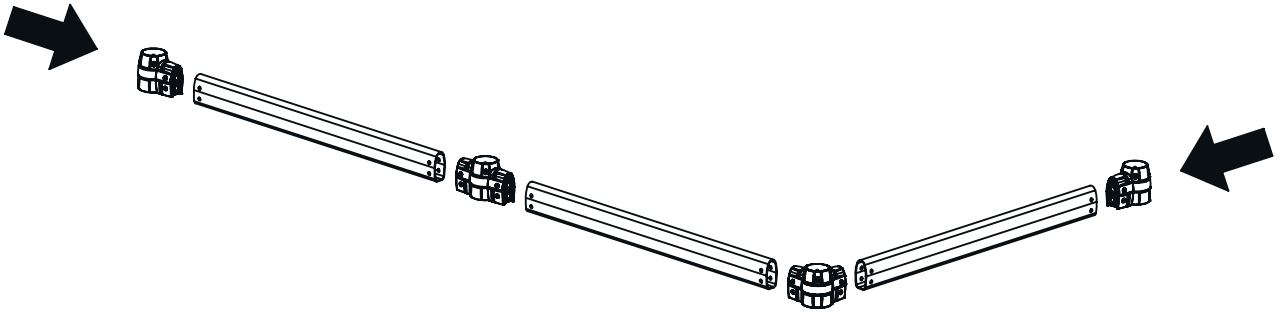

Step 2

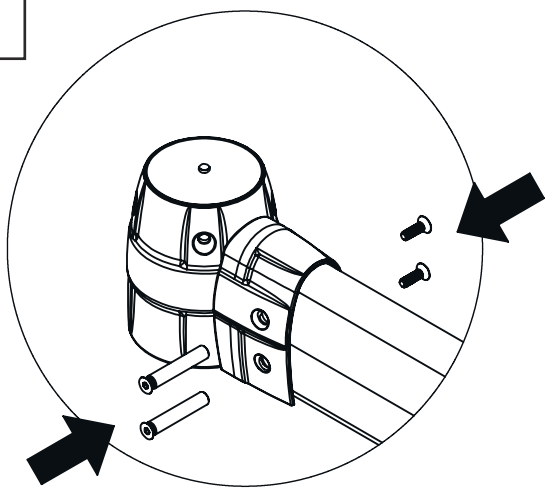

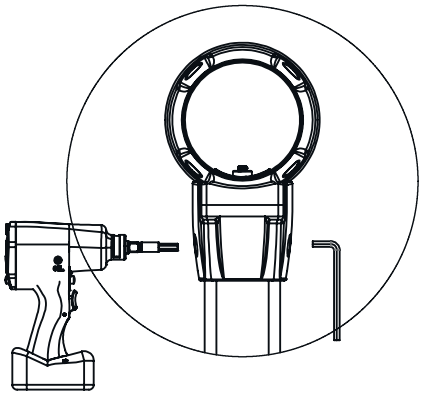

Step 3

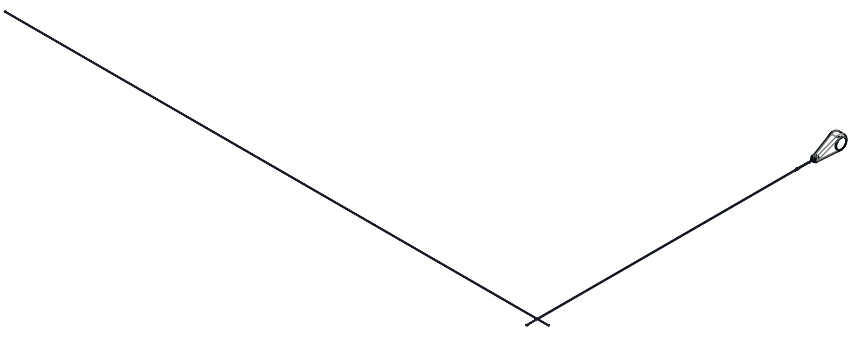

Step 4

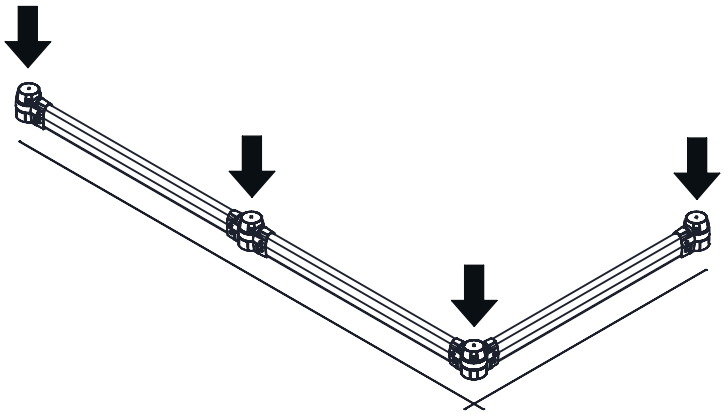

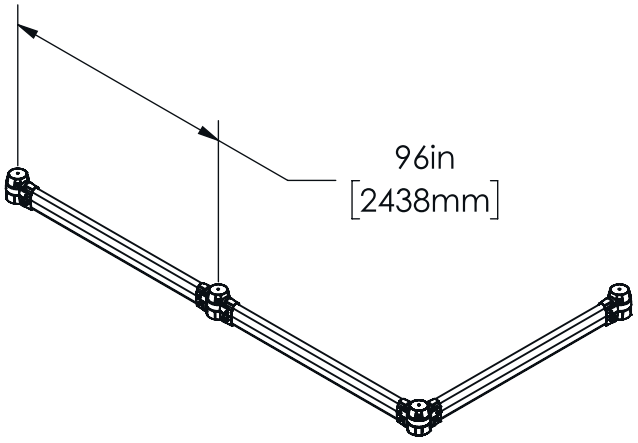

Step 5



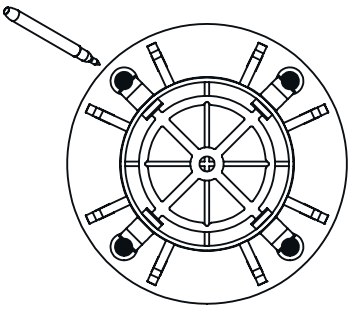

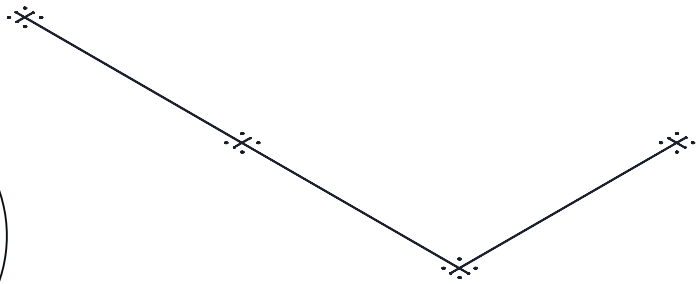

Step 6

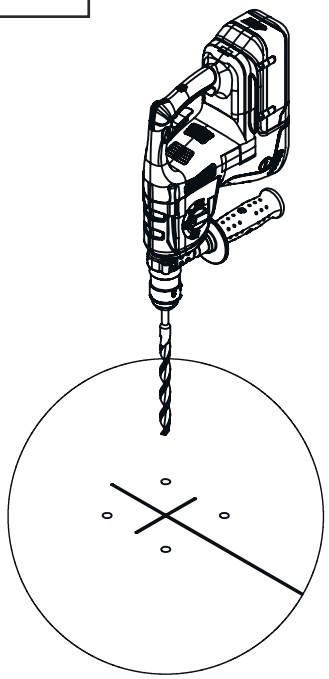

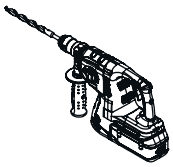

Anchor detail

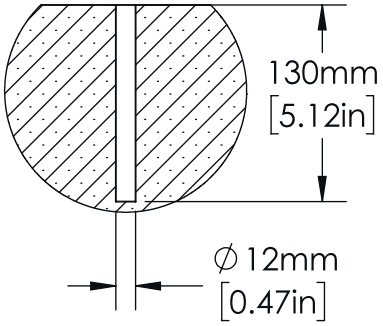

- **PPE recommended: High Visibilty Vest, Steel Toe Boots, Work Gloves, Ear Protection, Dust Mask, Eye Protection.**
- **Clean concrete dust by running the vacuum during drilling.**

Step 7

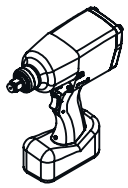

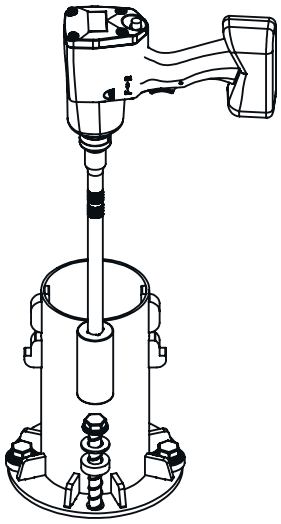

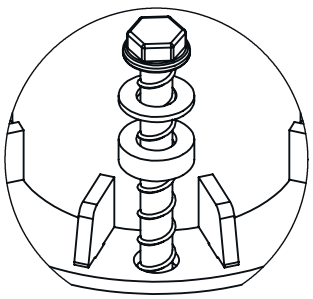

Anchor detail

Step 8

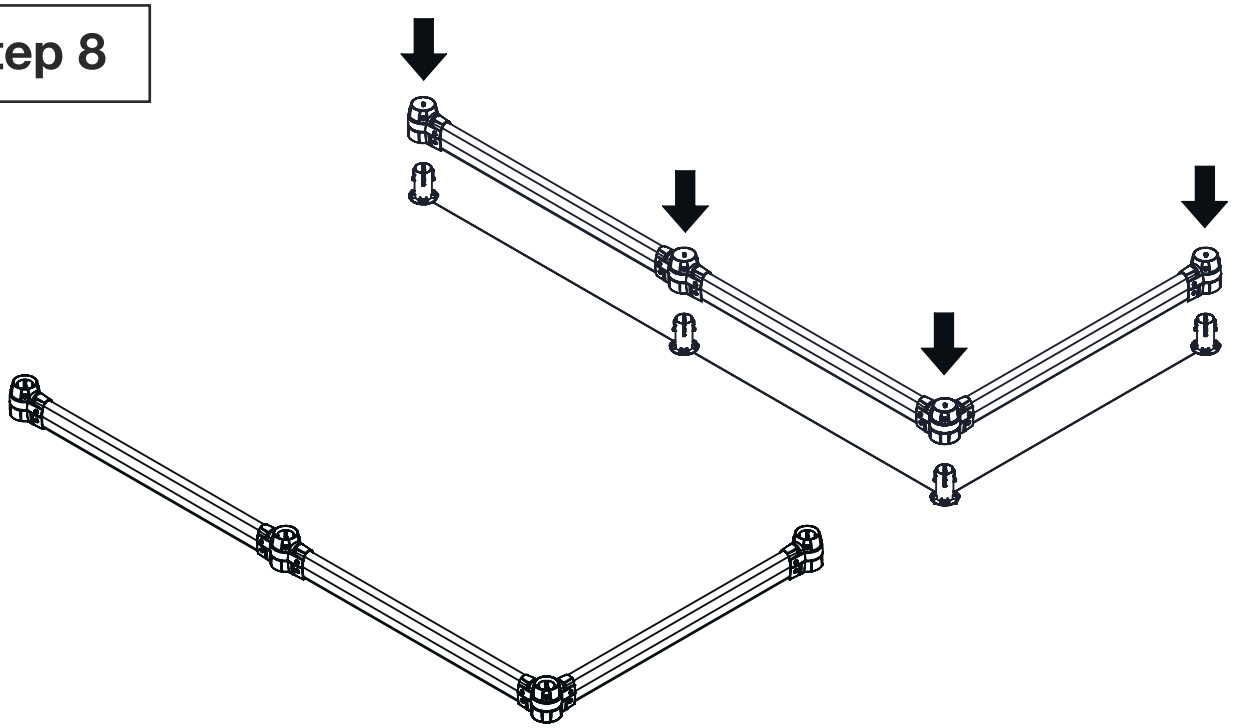

Step 9

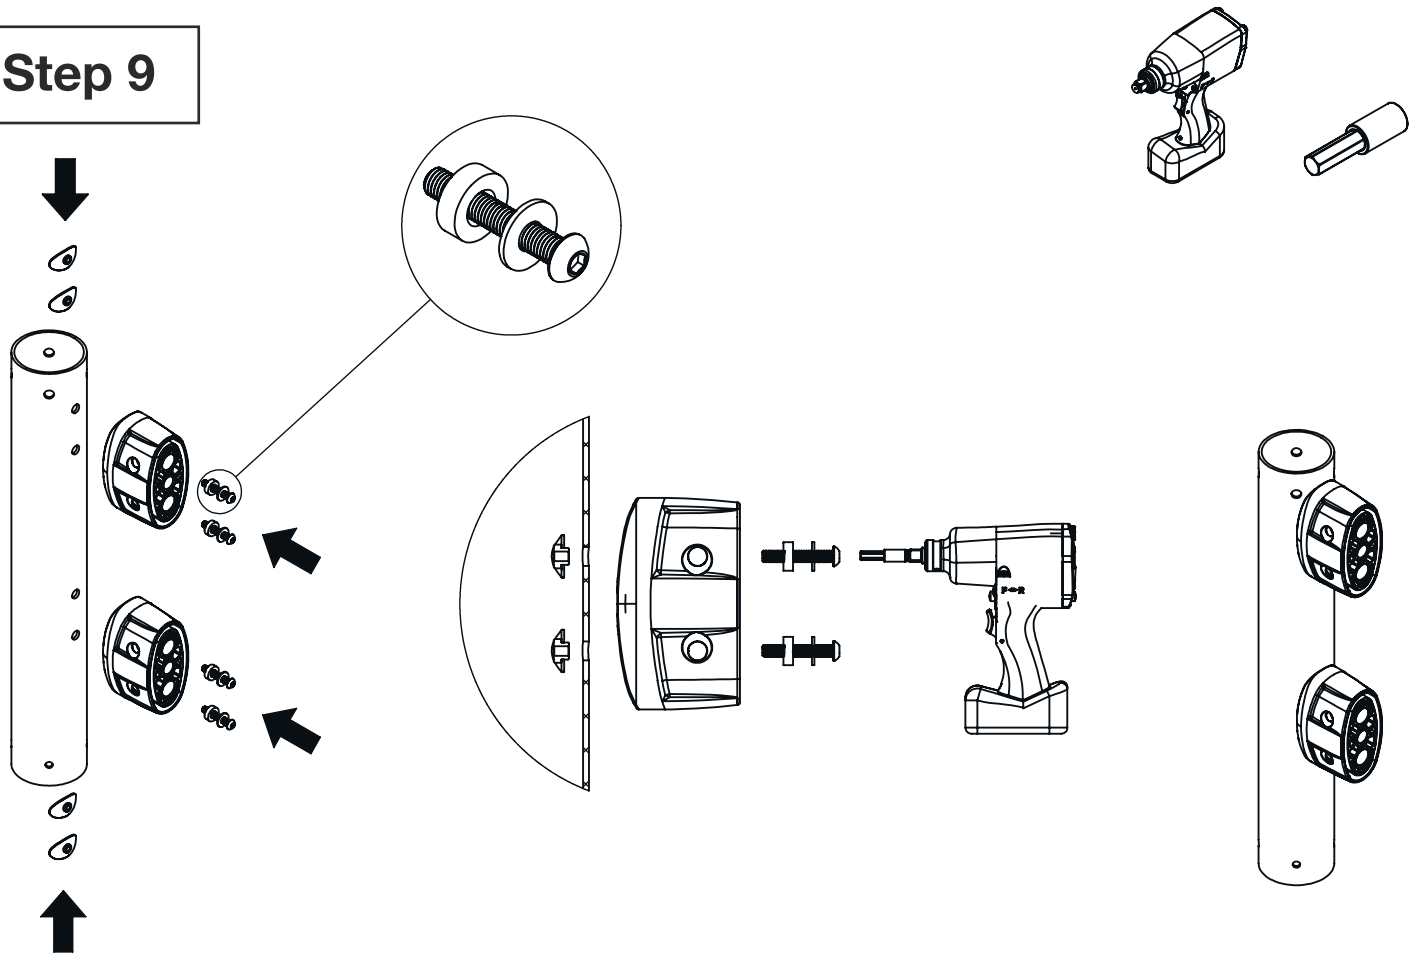

REPEAT FOR ALL POSTS

Step 10

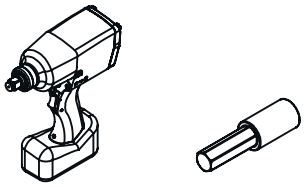

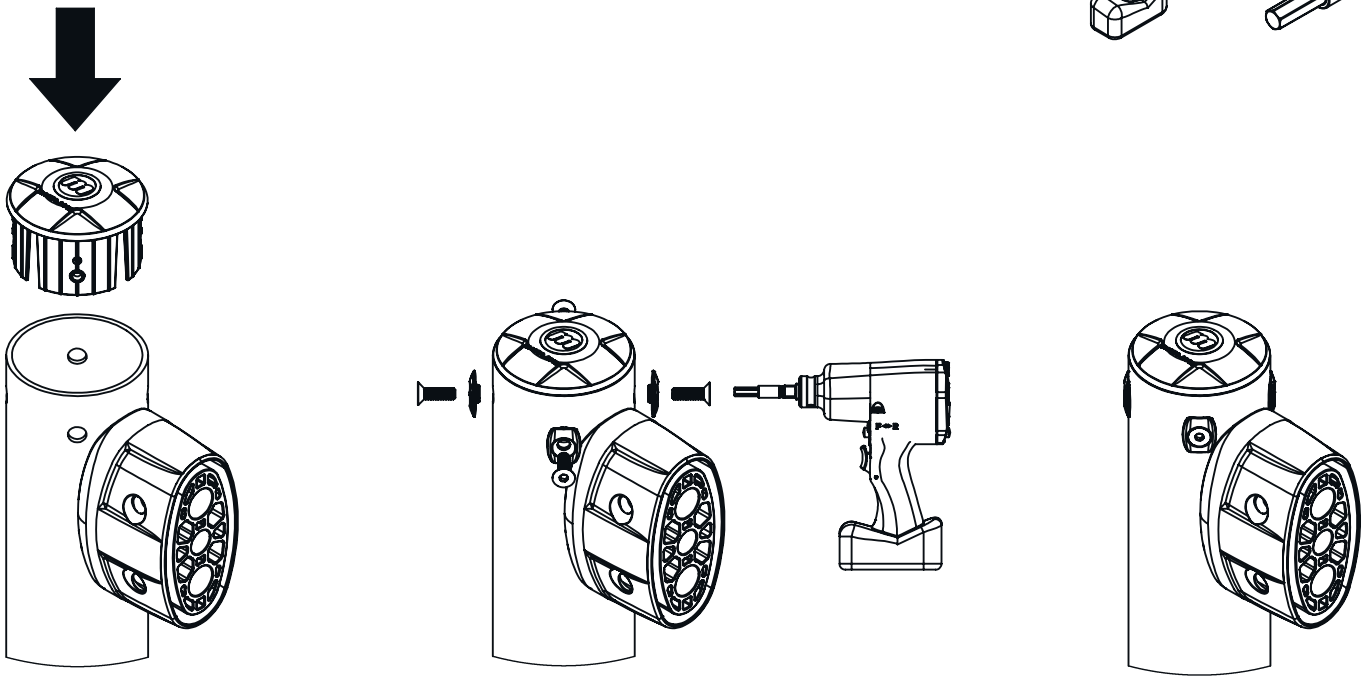

REPEAT FOR ALL POSTS

Step 11

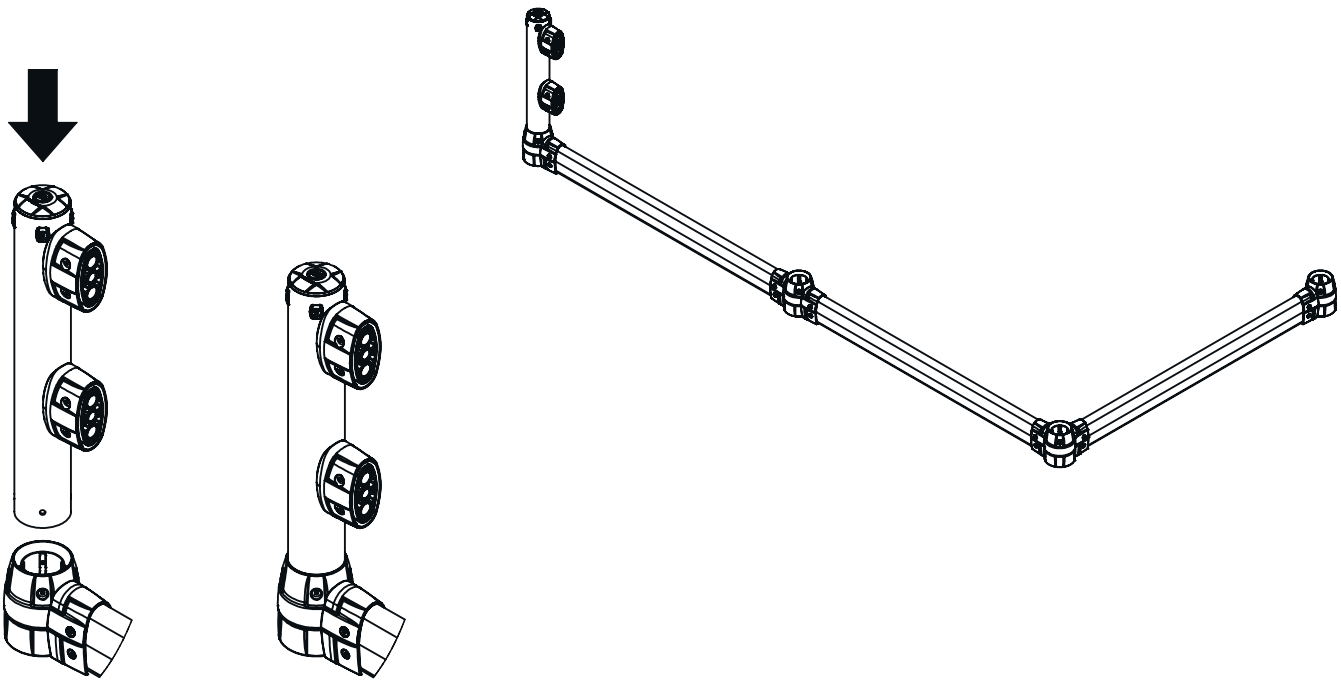

Step 12

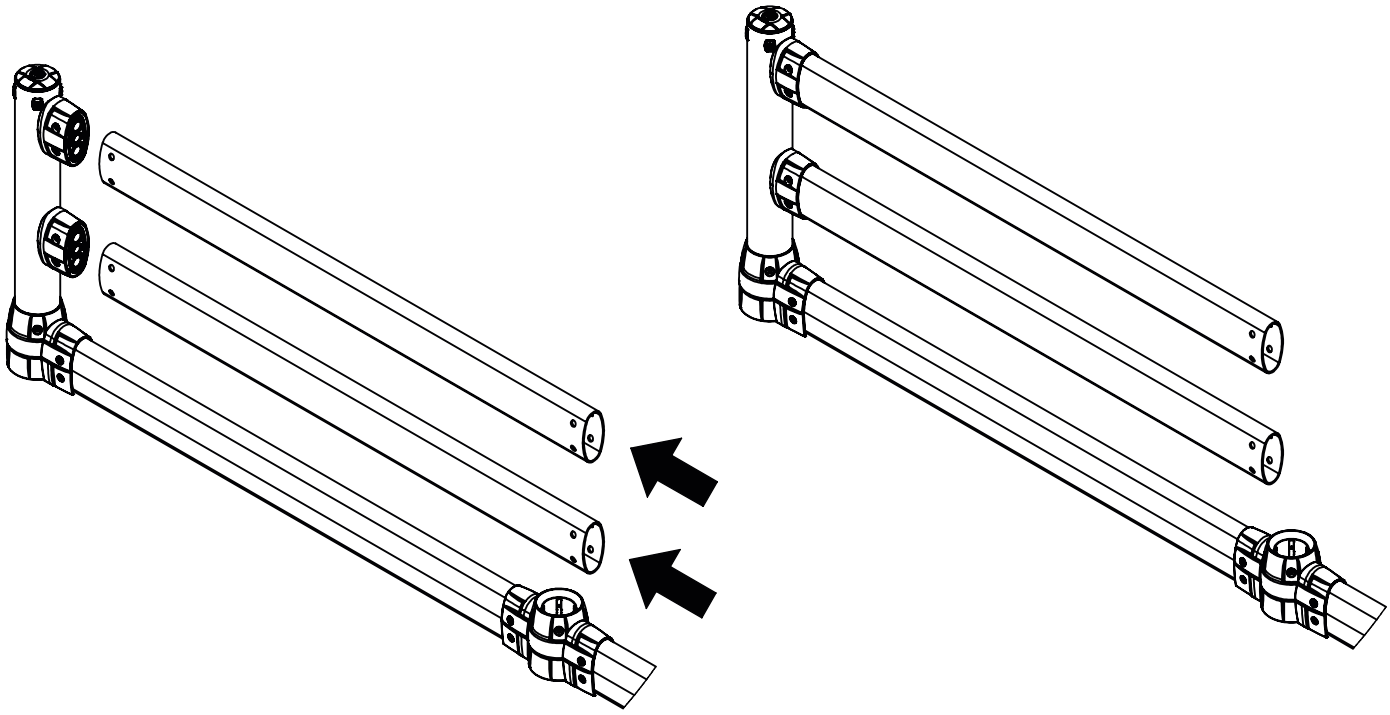

Step 13

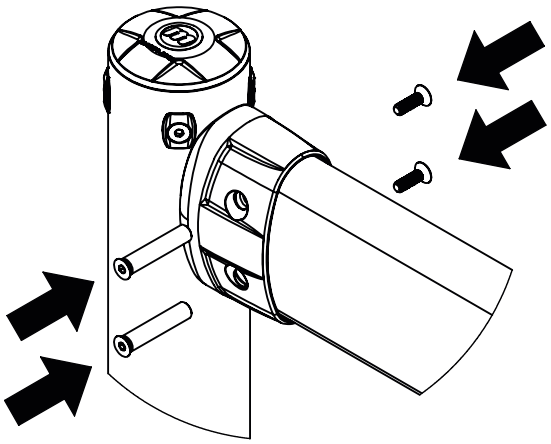

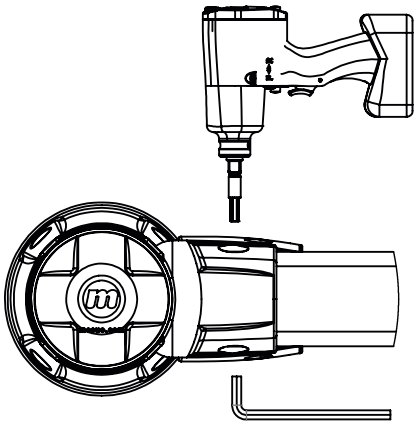

Step 14

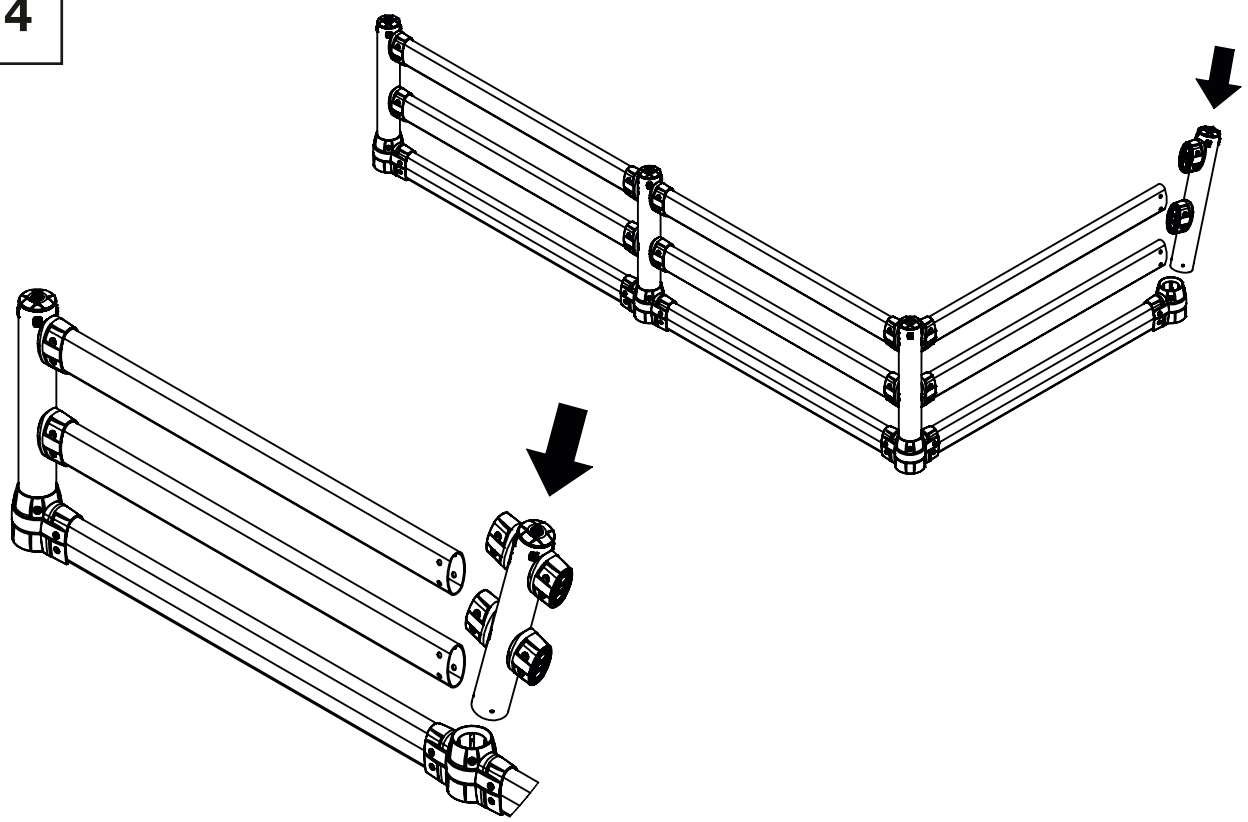

Step 15

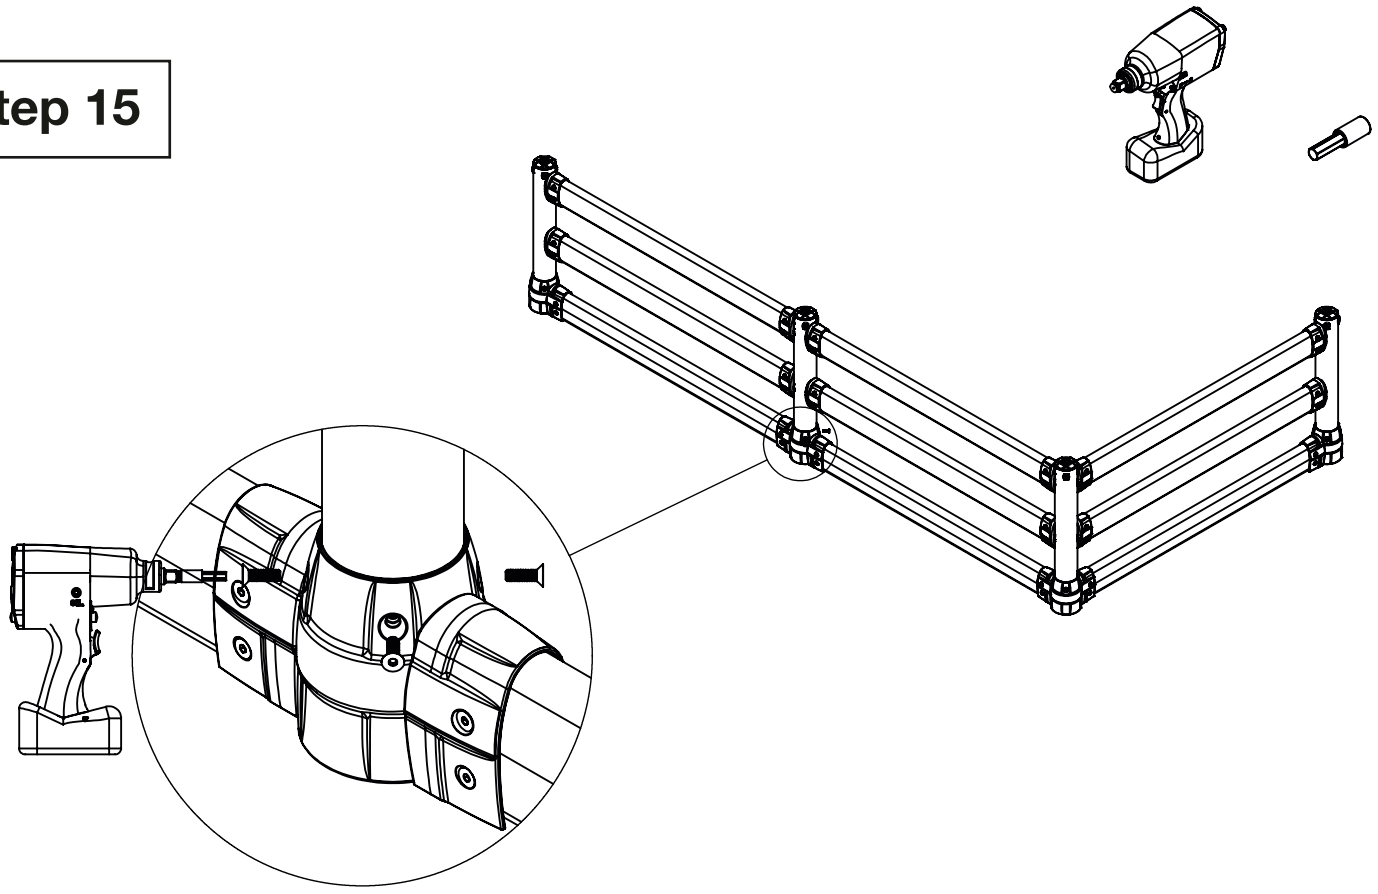

REPEAT FOR ALL POSTS

Appendix A:
Custom Length Rails

Step A1

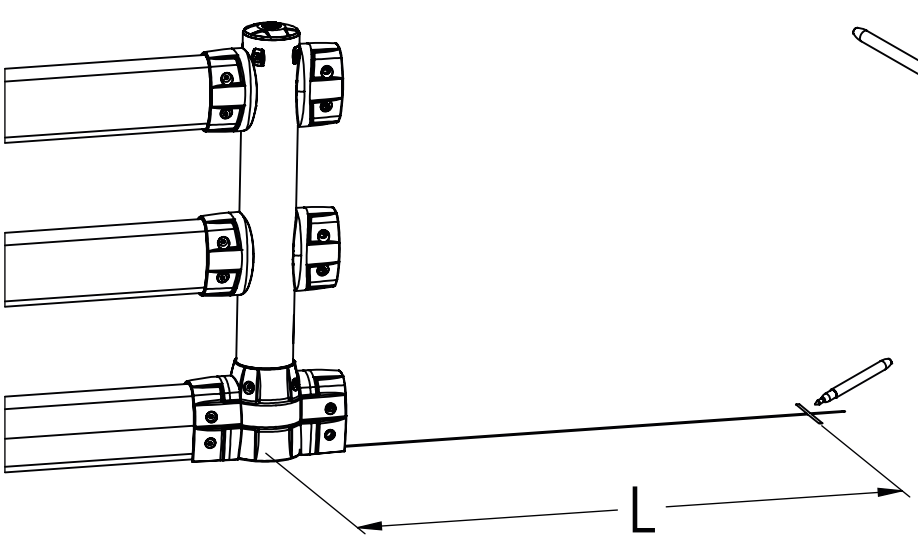

Step A2

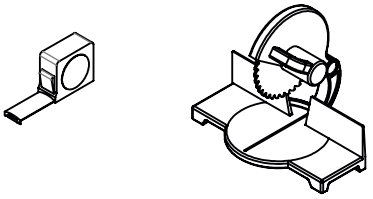

Crossbar Under-run Guard

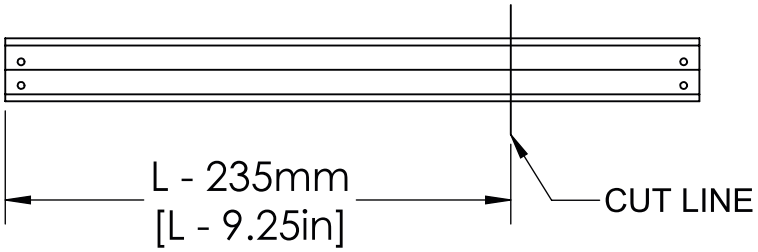

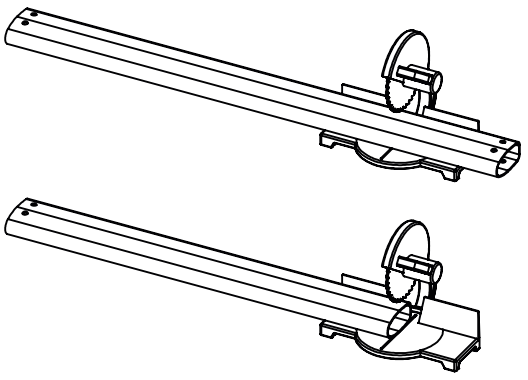

Crossbar L-Line

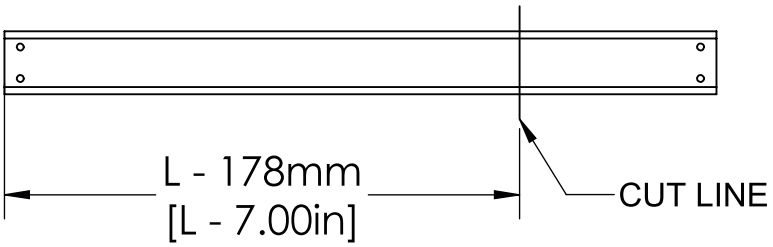

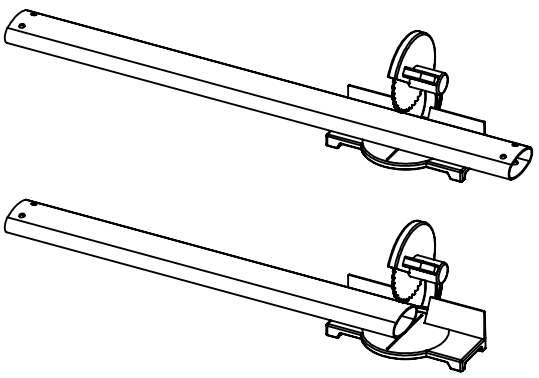

Step A3

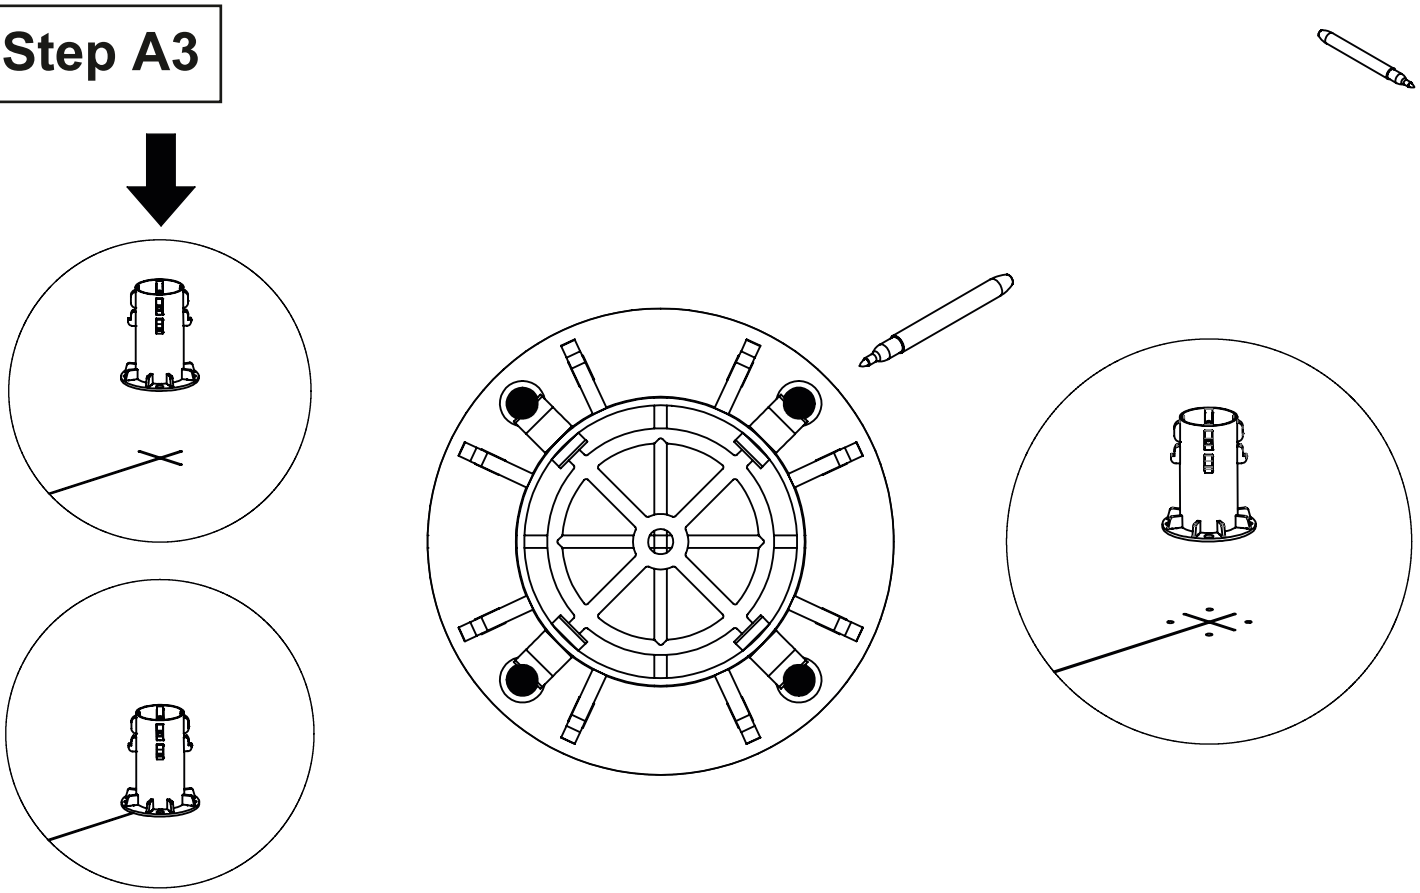

Step A4

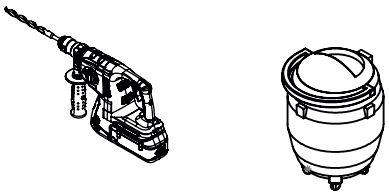

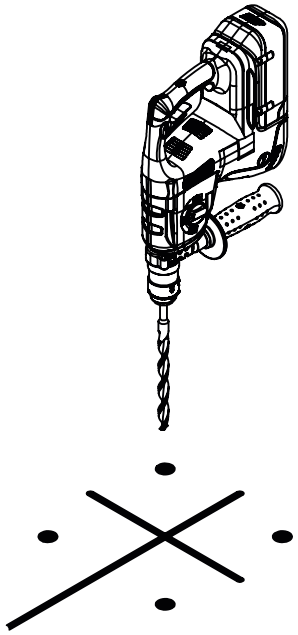

Anchor detail

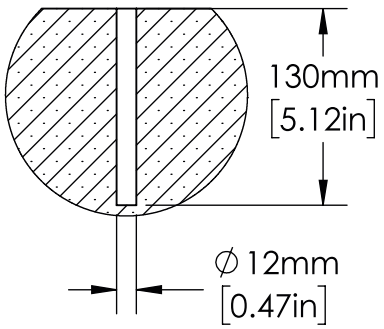

- **PPE recommended: High Visibilty Vest, Steel Toe Boots, Work Gloves, Ear Protection, Dust Mask, Eye Protection.**
- **Clean concrete dust by running the vacuum during drilling.**

Step A5

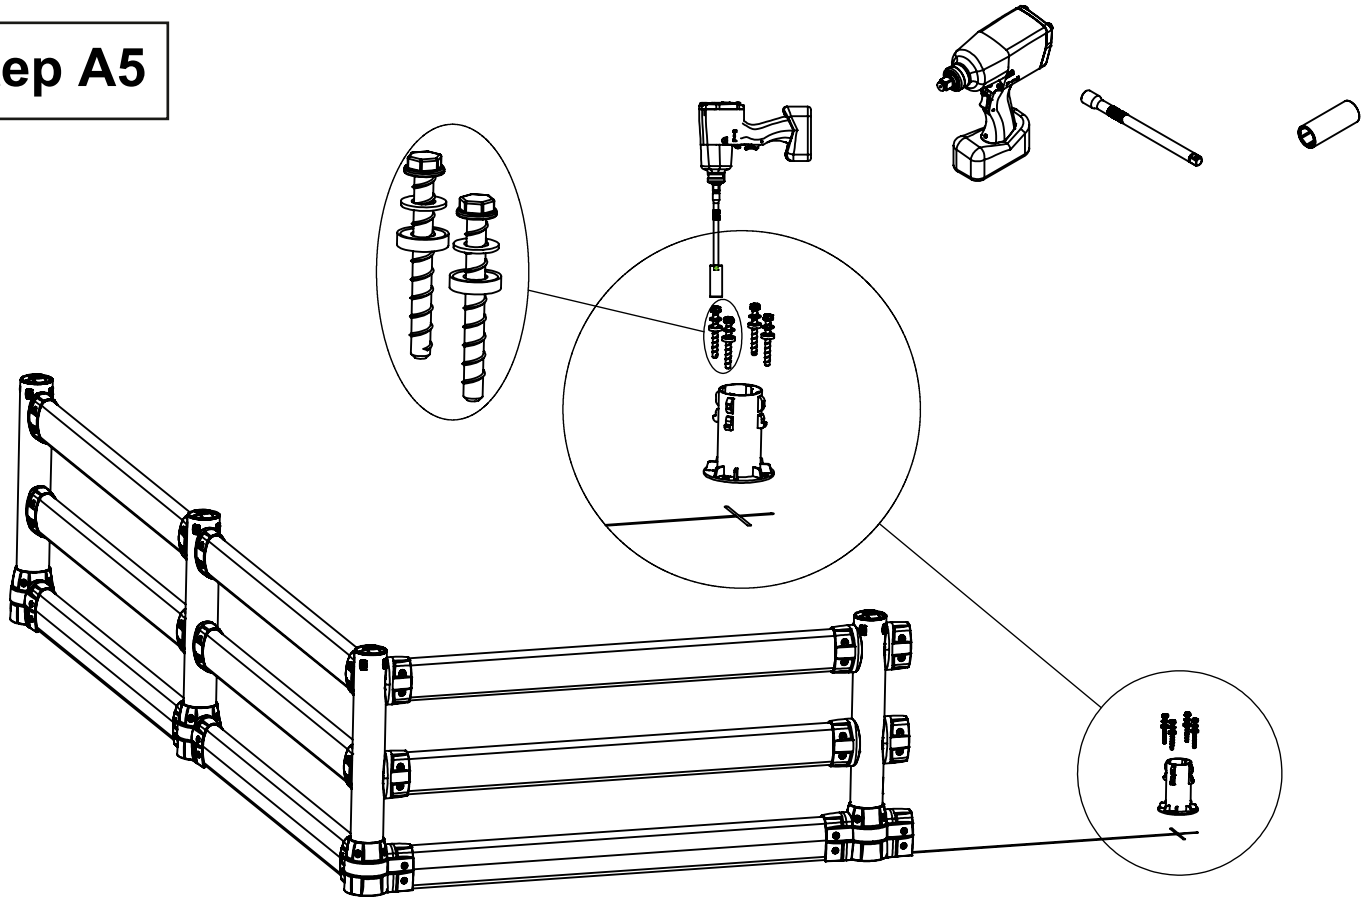

Step A6

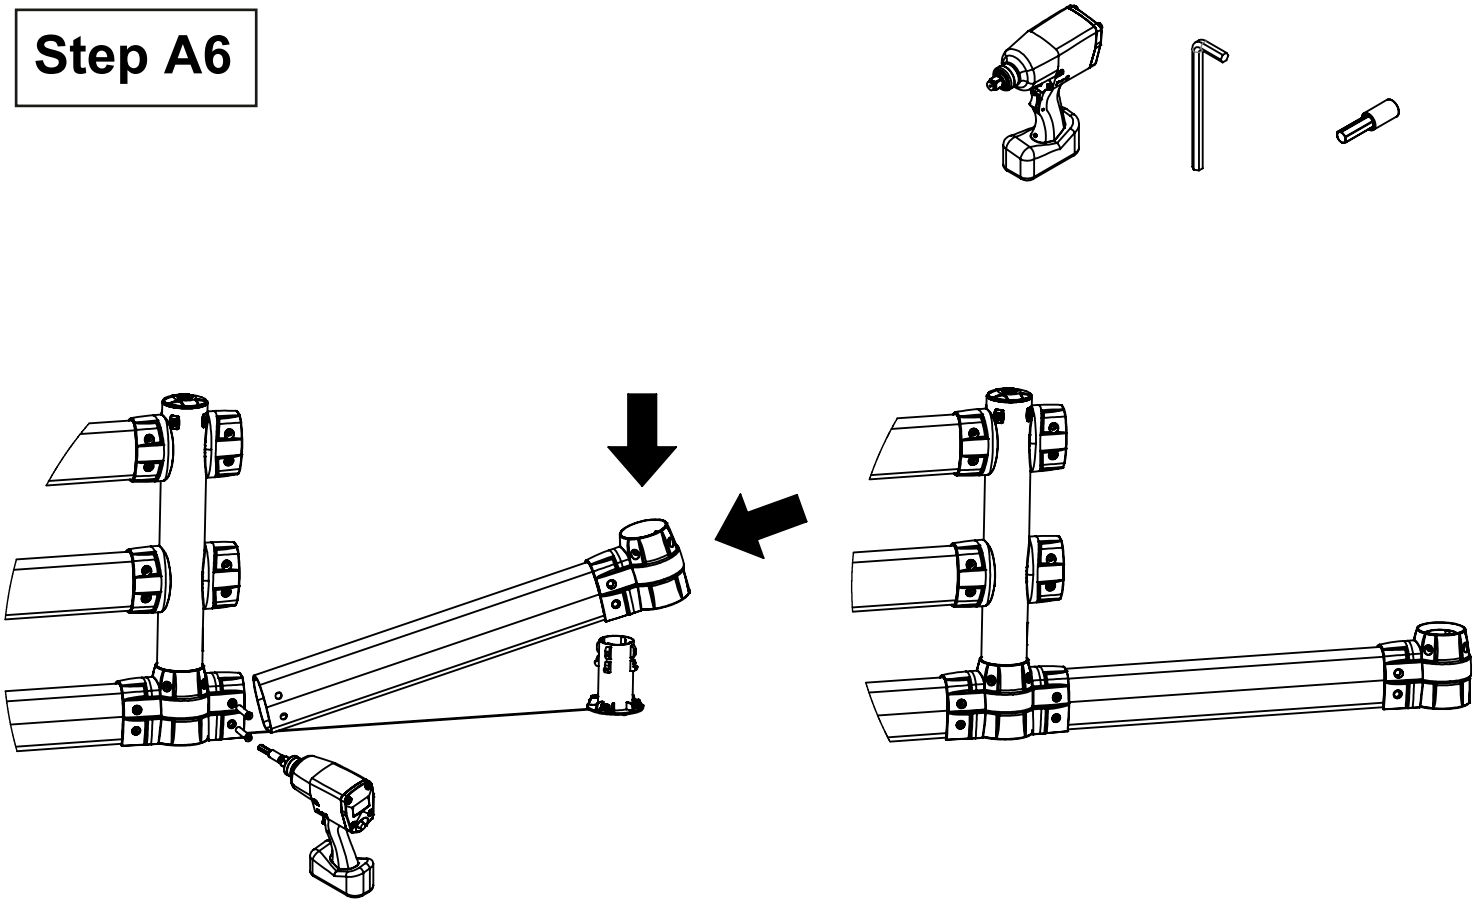

Step A7

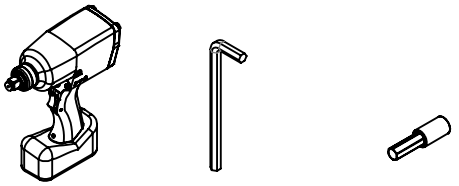

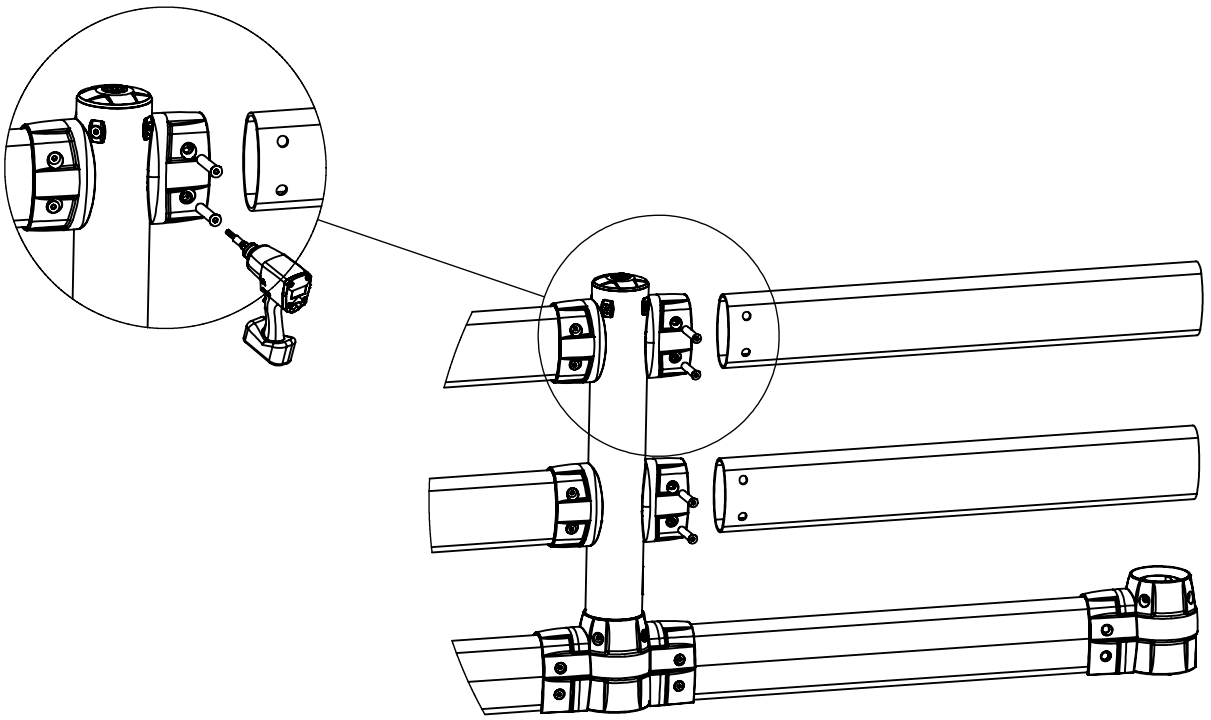

Step A8

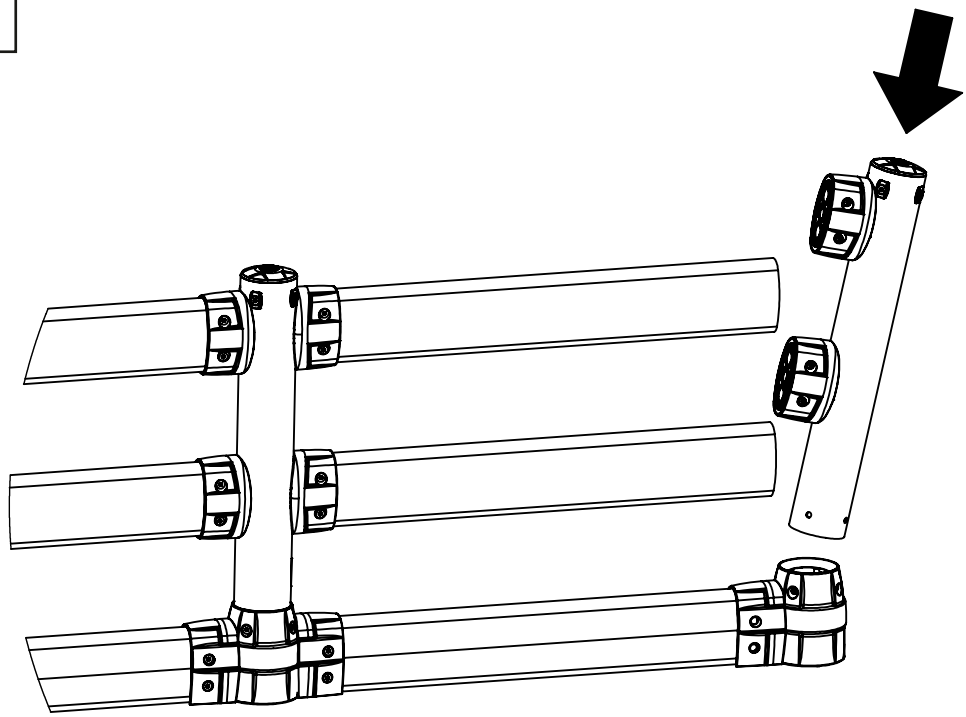

Step A9

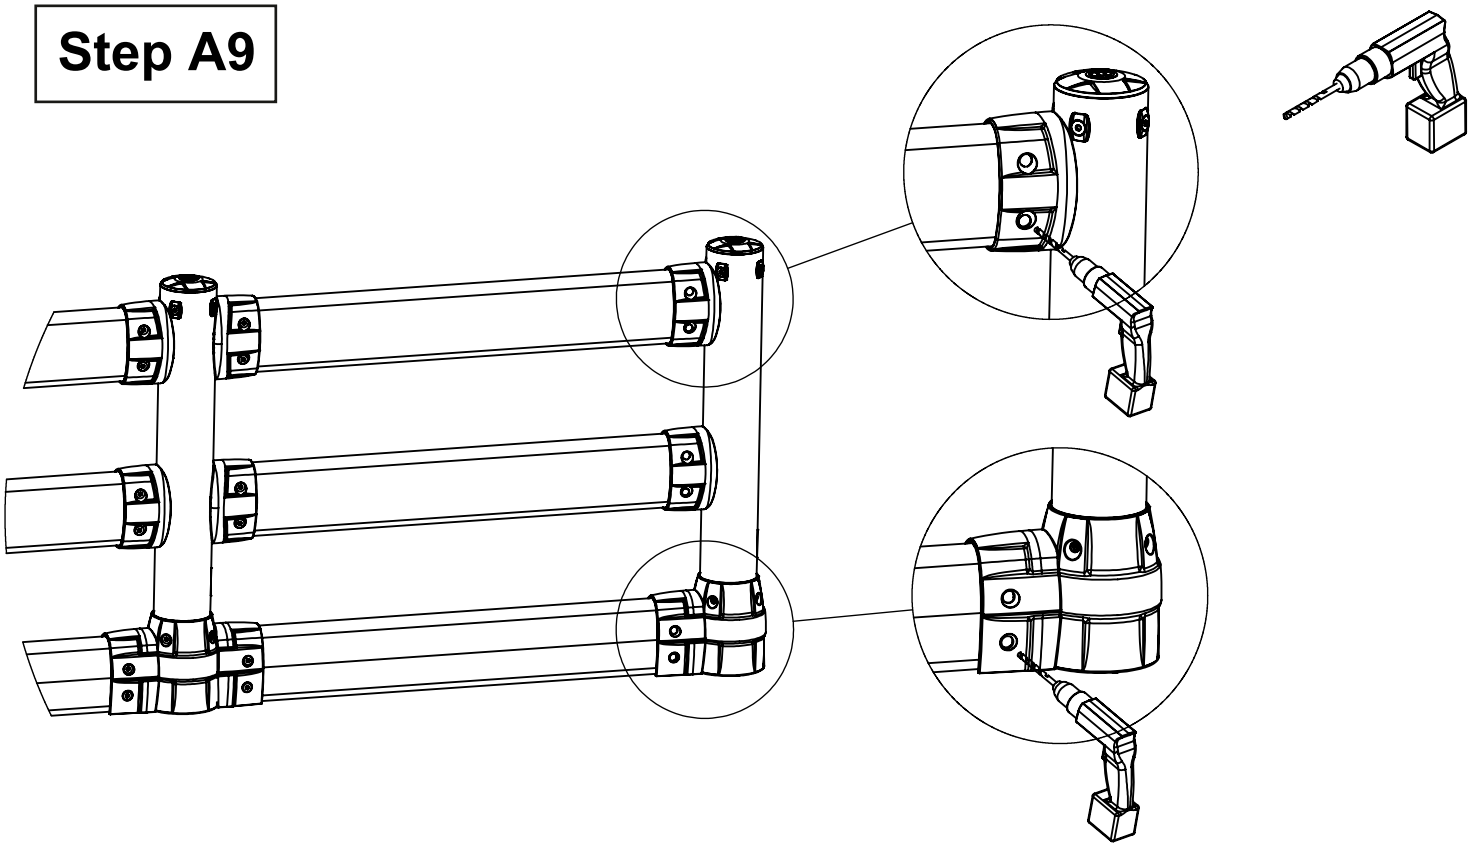

Step A10

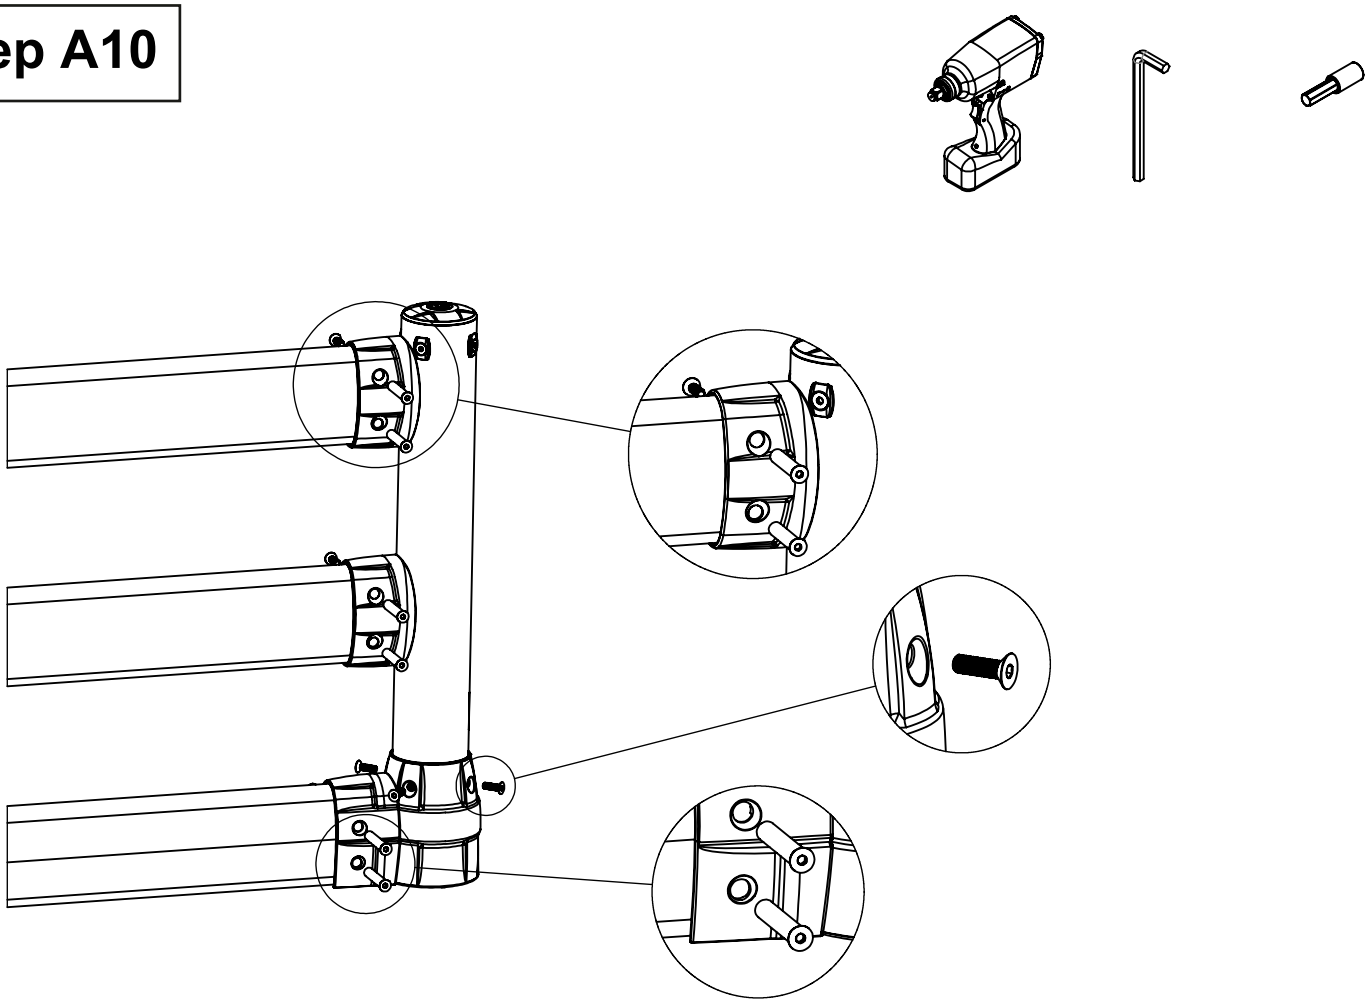
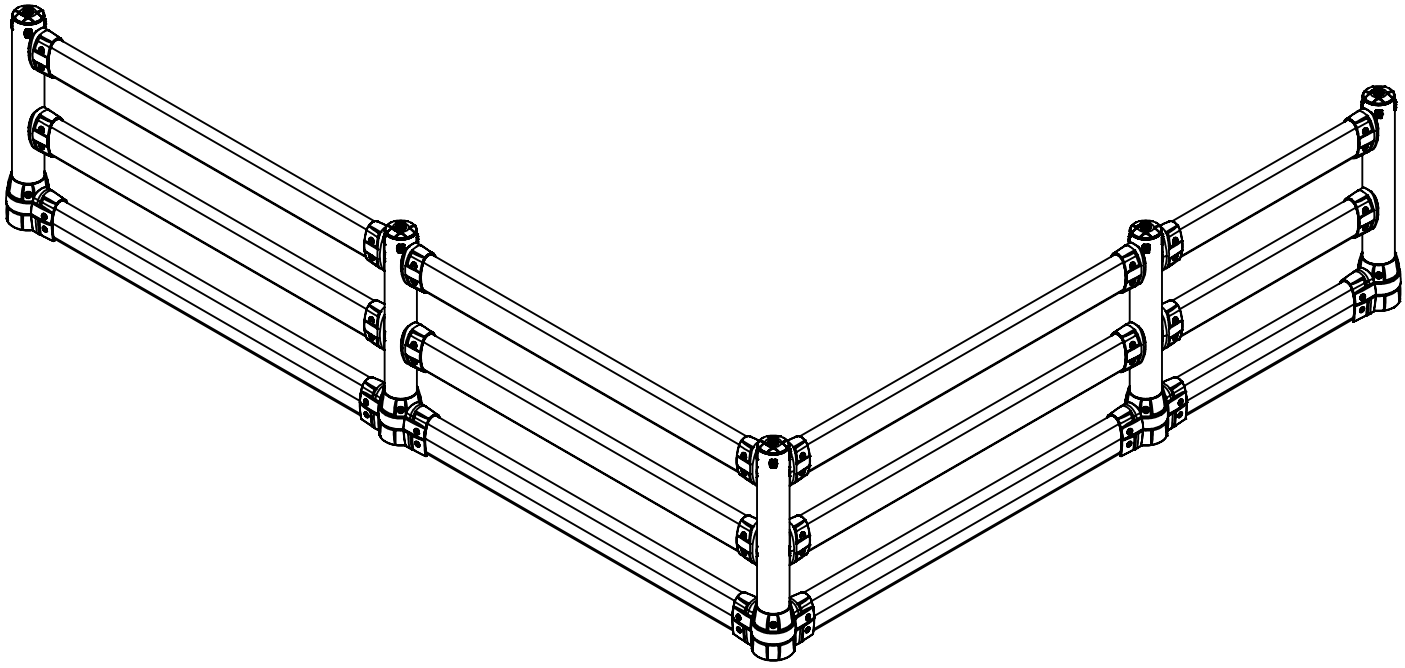
Installation Complete